MANHATTAN COMFORT

Hudson Wardrobe

Model: 34363, 34364, 34350, 34336

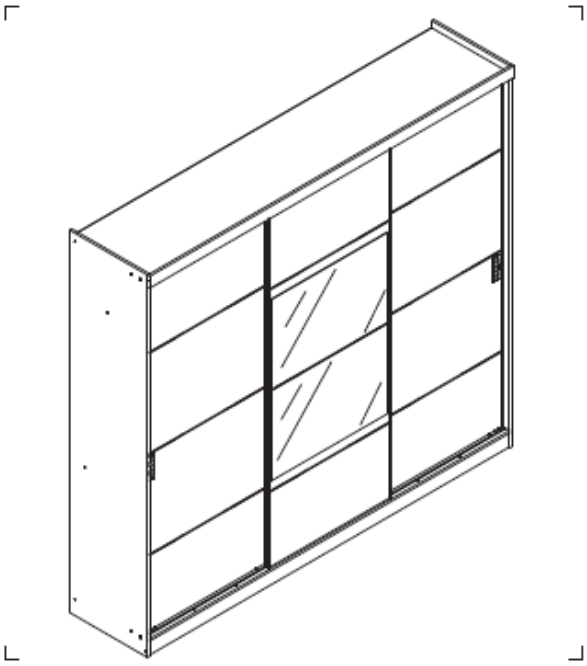

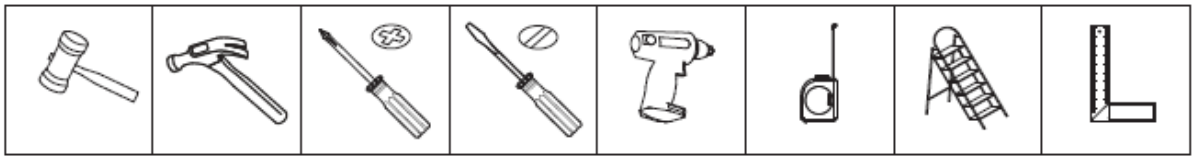

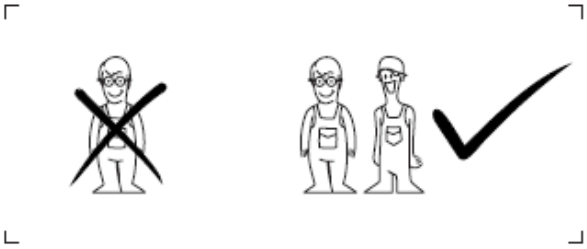

Need Help?
help@manhattancomfort.com
888-230-2225

MANHATTAN COMFORT

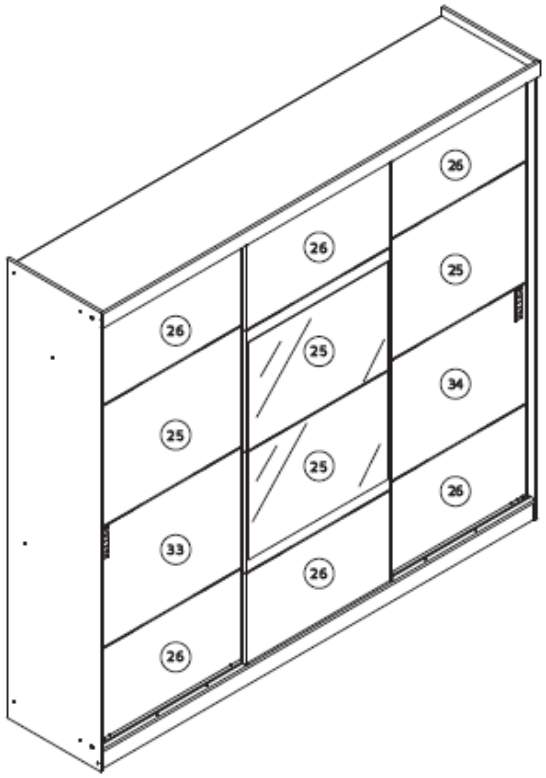

PART	DESCRIPTION	QUANTITY
1	BASE BOARD	1
2	FRONT MOP BOARD	1
3	RIGHT OUTER SIDE	1
4	RIGHT INNER SIDE	1
5	SMALLER SHELF	3
6	CENTRAL INNER SIDE	1
7	LUGGAGE SHELF	1
8	LEFT INNER SIDE	1
9	LOWER CENTRAL SHELF	1
10	UPPER CENTRAL SHELF	1
11	HORIZONTAL CENTRAL SIDE	2
12	LEFT OUTER SIDE	1
13	LOWER SHELVES	1
14	SUPPORT	2
15	HEAD PIECE	1
16	UPPER FRAME	1
17	SIDE BACKPLATE	4
18	CENTRAL BACKPLATE	2
19	UPPER BACKPLATE	1
20	FRONT OF DRAWER	4
21	LEFT SIDE DRAWER	4
22	RIGHT SIDE DRAWER	4
23	BOTTOM OF DRAWER	4
24	BACK OF DRAWER	4
25	LARGER DOOR	4
26	SMALLER DOOR	6
27	BASE SUPPORT	2
28	BACK MOP BOARD	1
29	FRONT SIDE LEG	2
30	FRONT CENTRAL LEG	2
31	BACK SIDE LEG	2
32	BACK CENTRAL LEG	2
33	LEFT SIDE DOOR	1
34	RIGHT SIDE SOOR	1
35	MDF 'H' PIECE	3

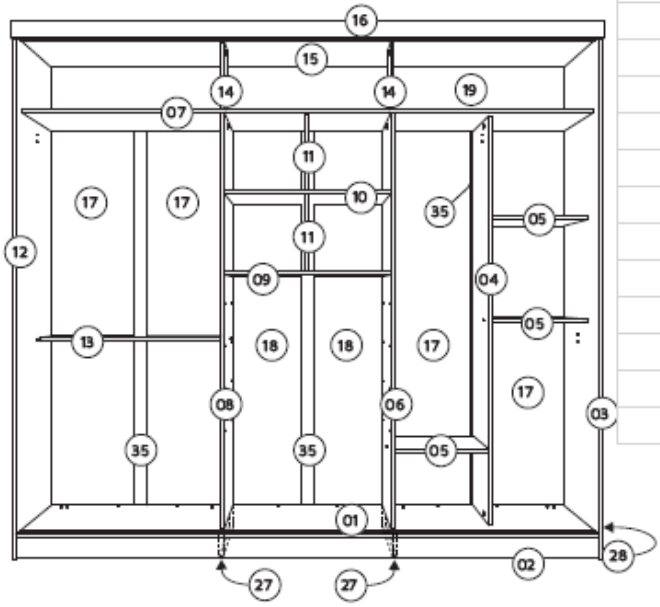

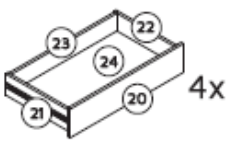

MANHATTAN COMFORT

Hardware

0136

0138

2014

0394

Adhesive Nail Covers

0342

0602

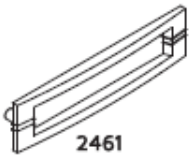
2461

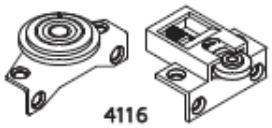
4116

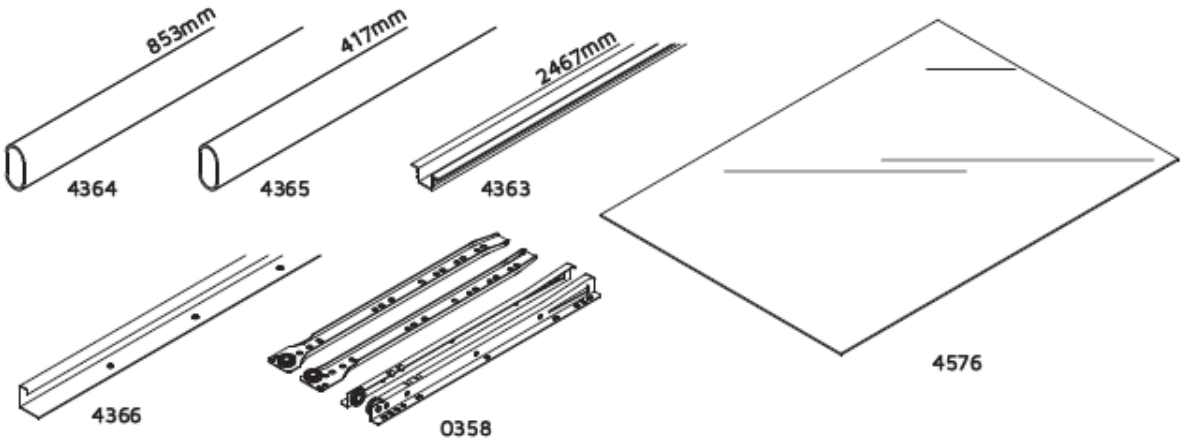

4364 4365 4363 4576

4366 0358

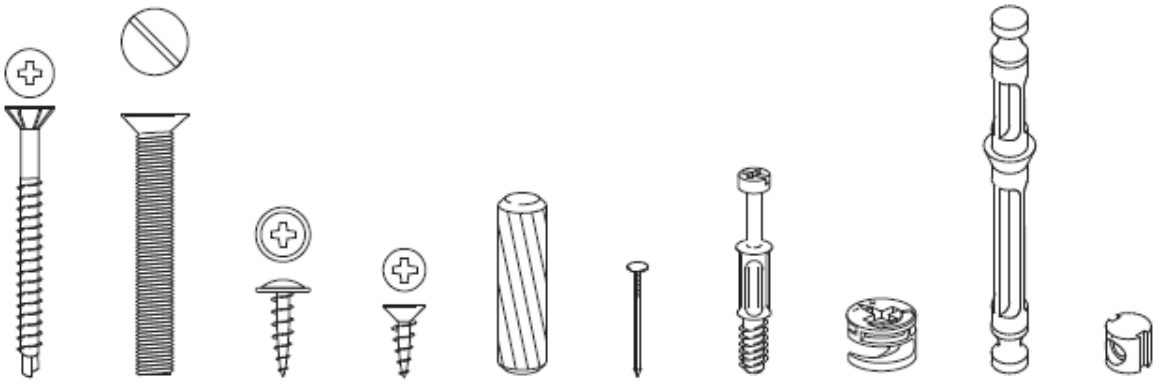
3527 4800 0502 0160 0329 0357 0599 0494 3529 3940

1

A

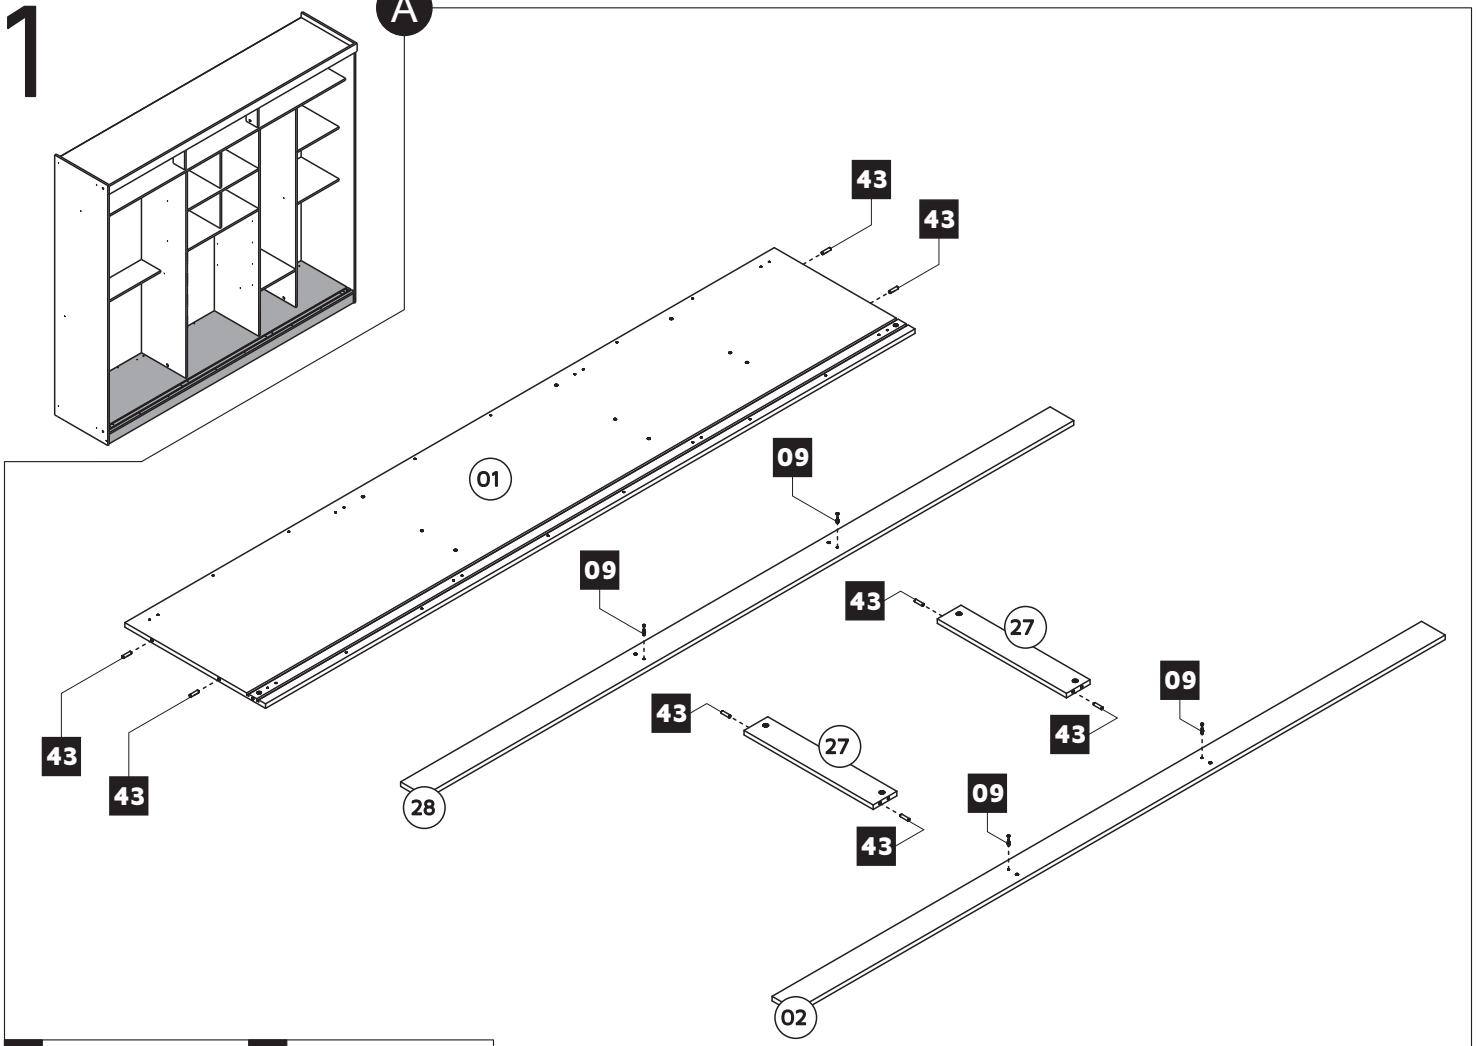
43
43
01
09
09
43
27
43
43
43
27
43
09
43
28
09
43
02

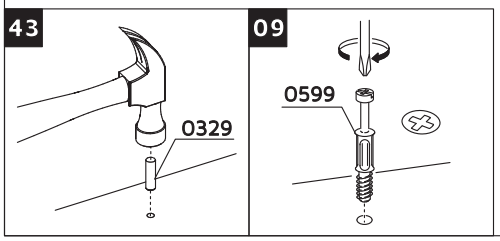
43
0329
09
0599

B

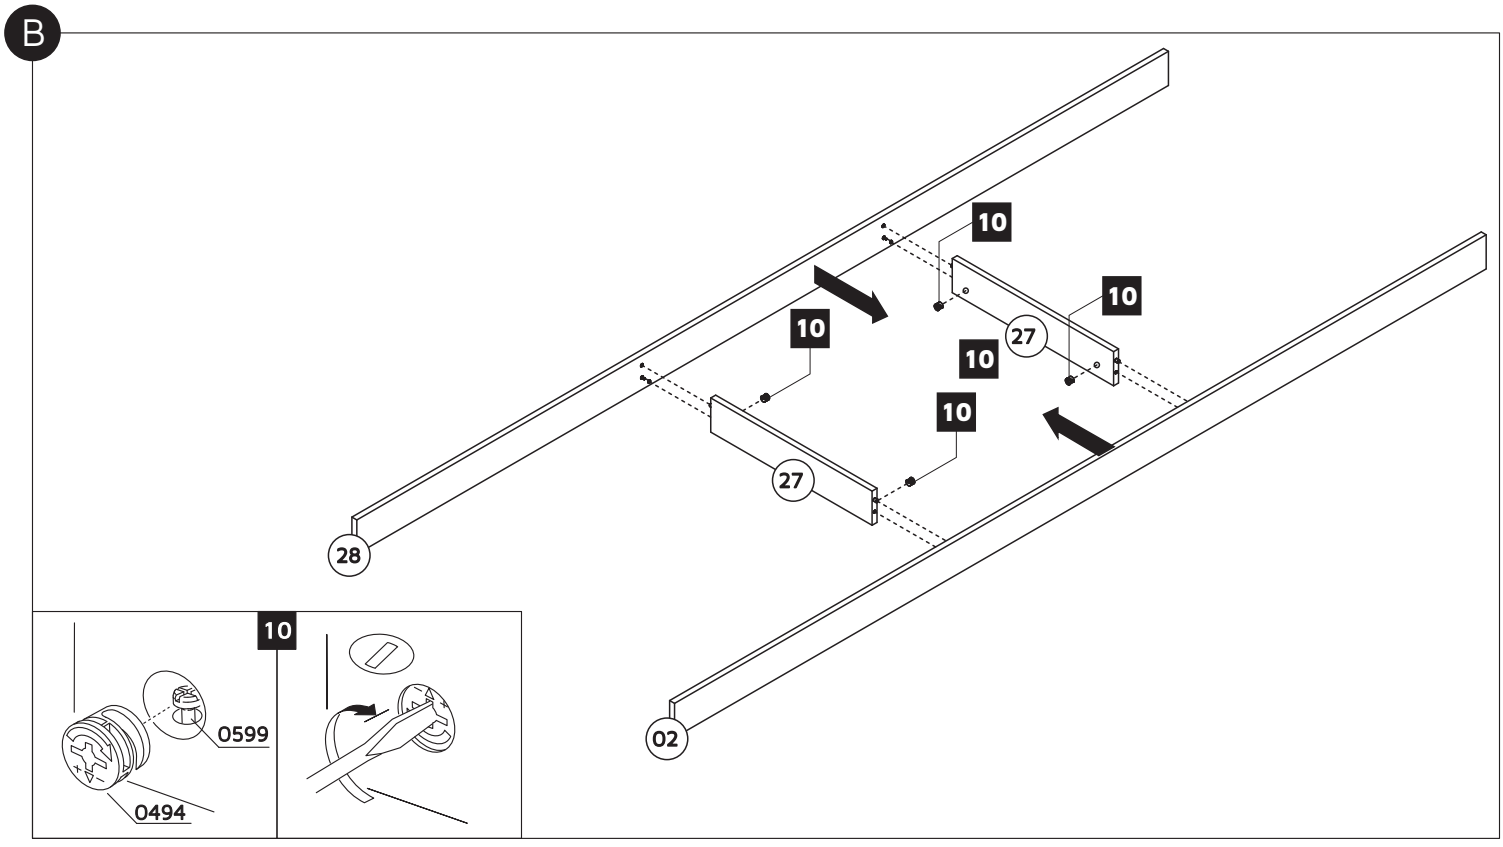
10
10
10
27
10
10
27
28
02

10
0599
0494

C

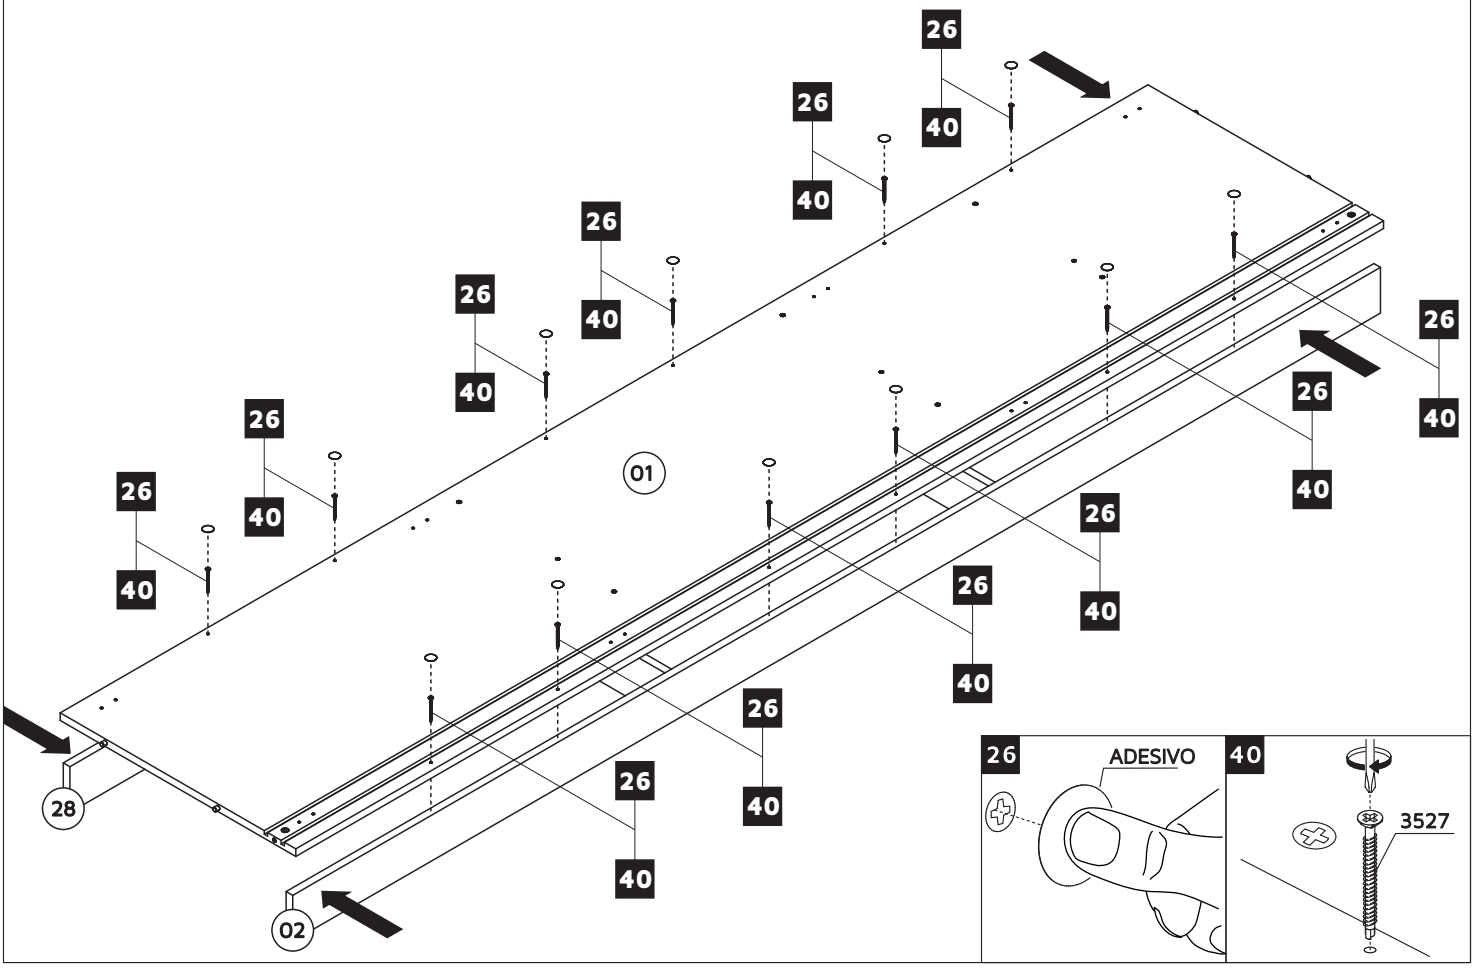

D

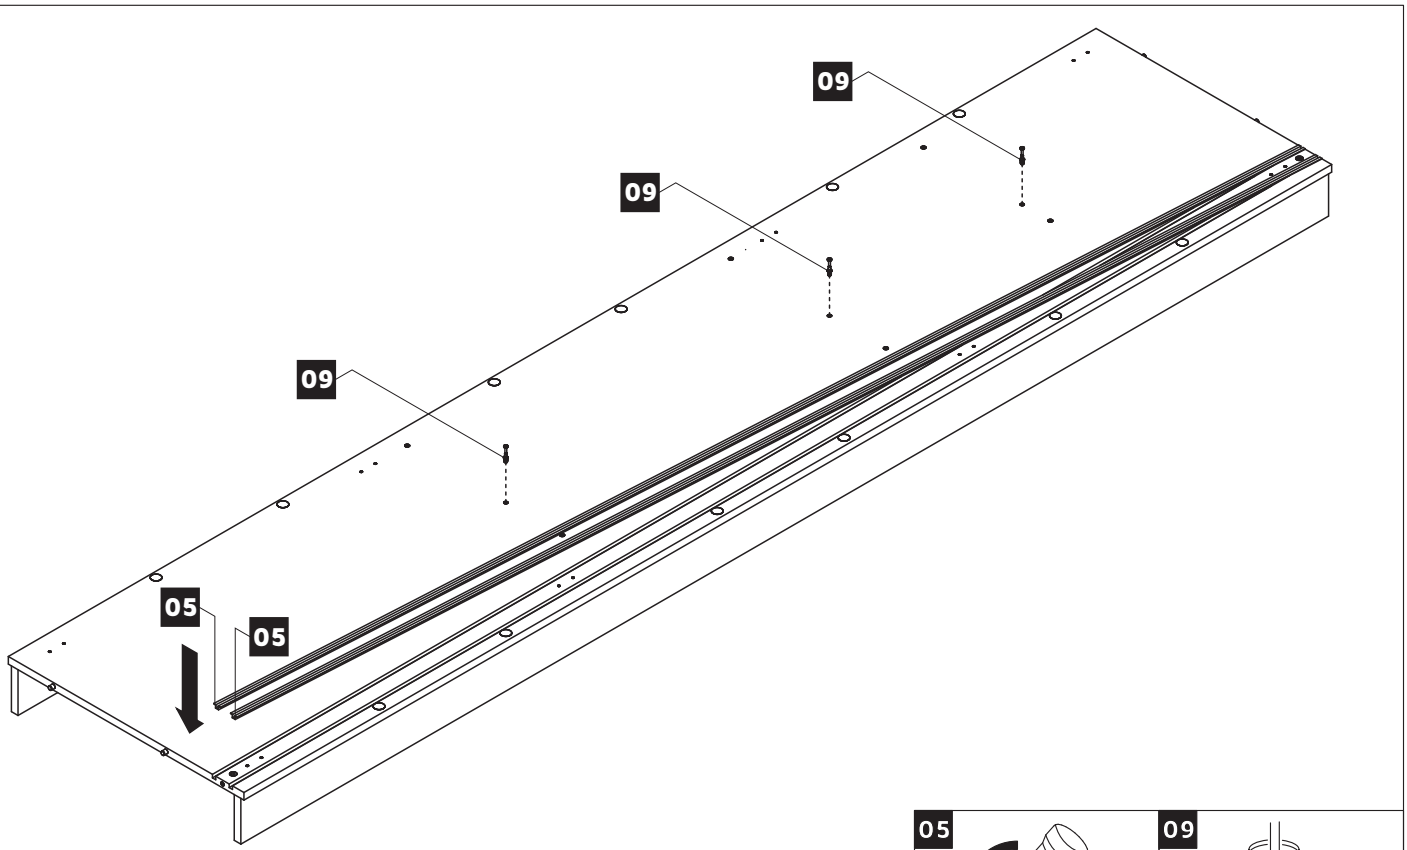

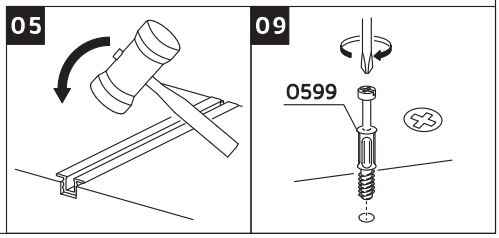

E

The assembly of the feet is optional.

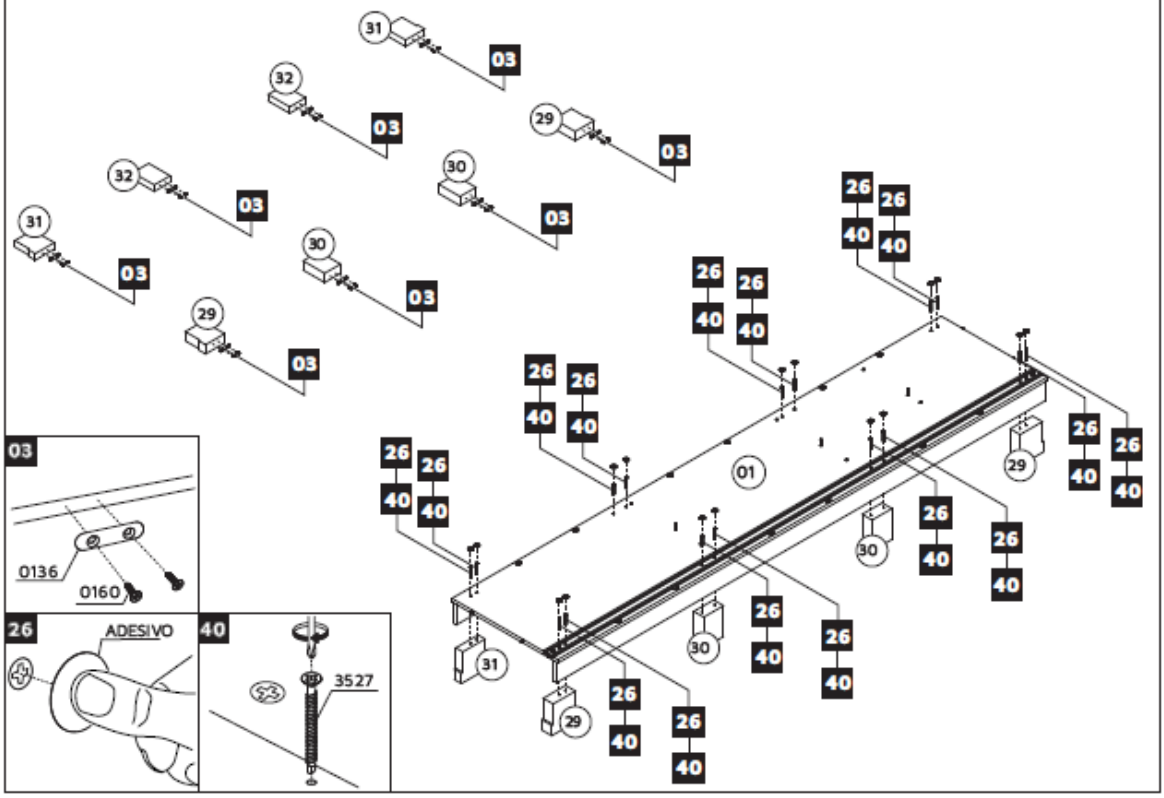

F

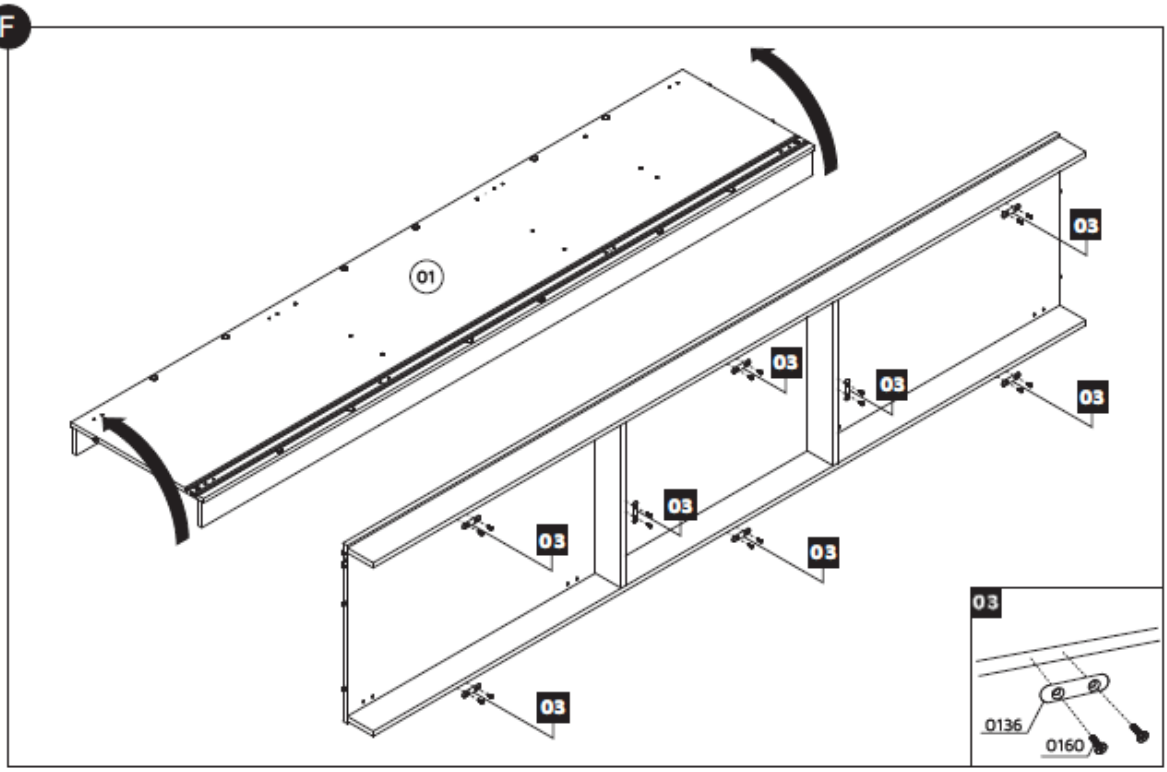

2

A

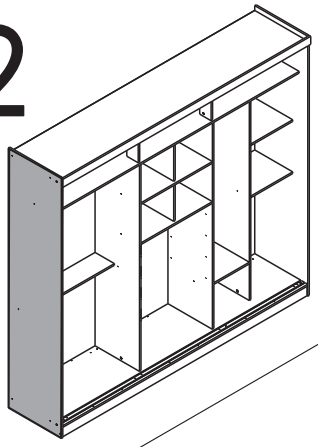

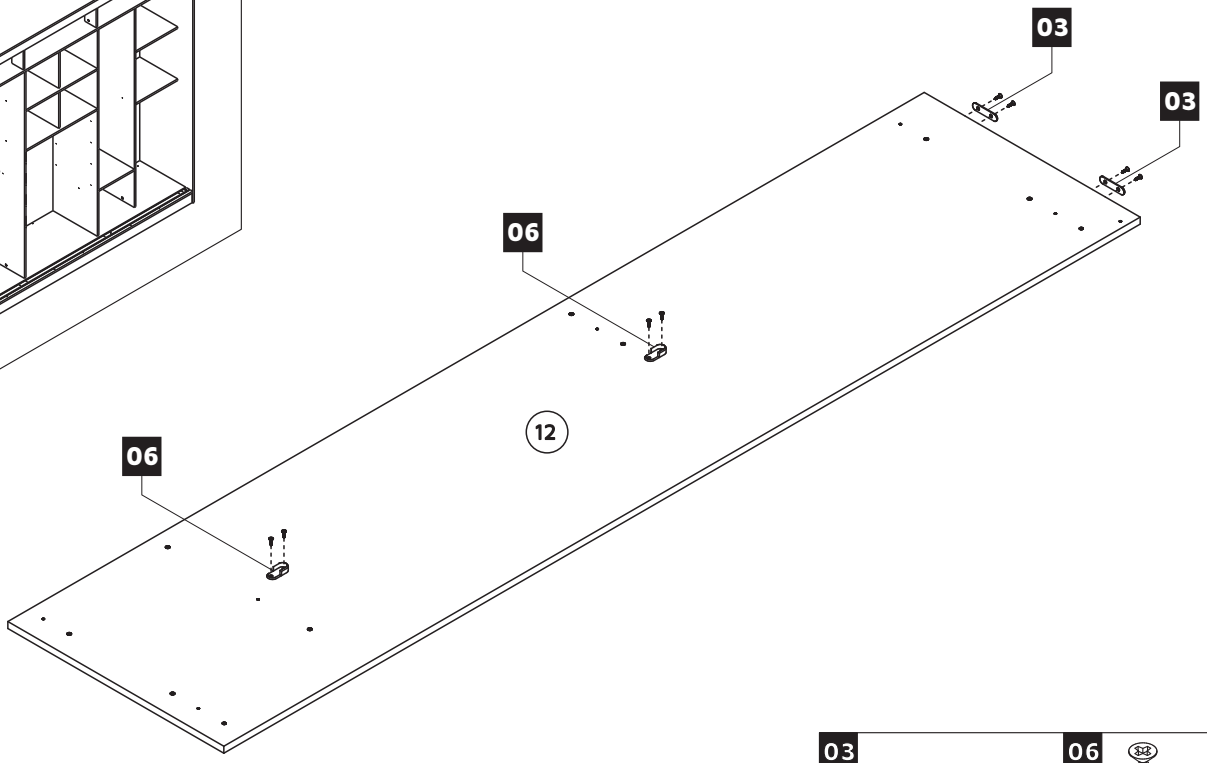
03
03
06
12
06

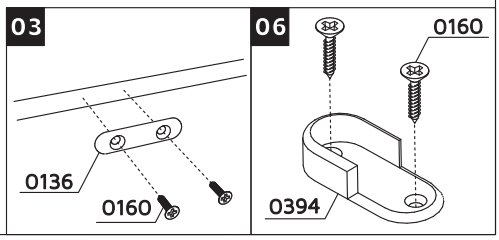
03
0136
0160
06
0160
0394

B

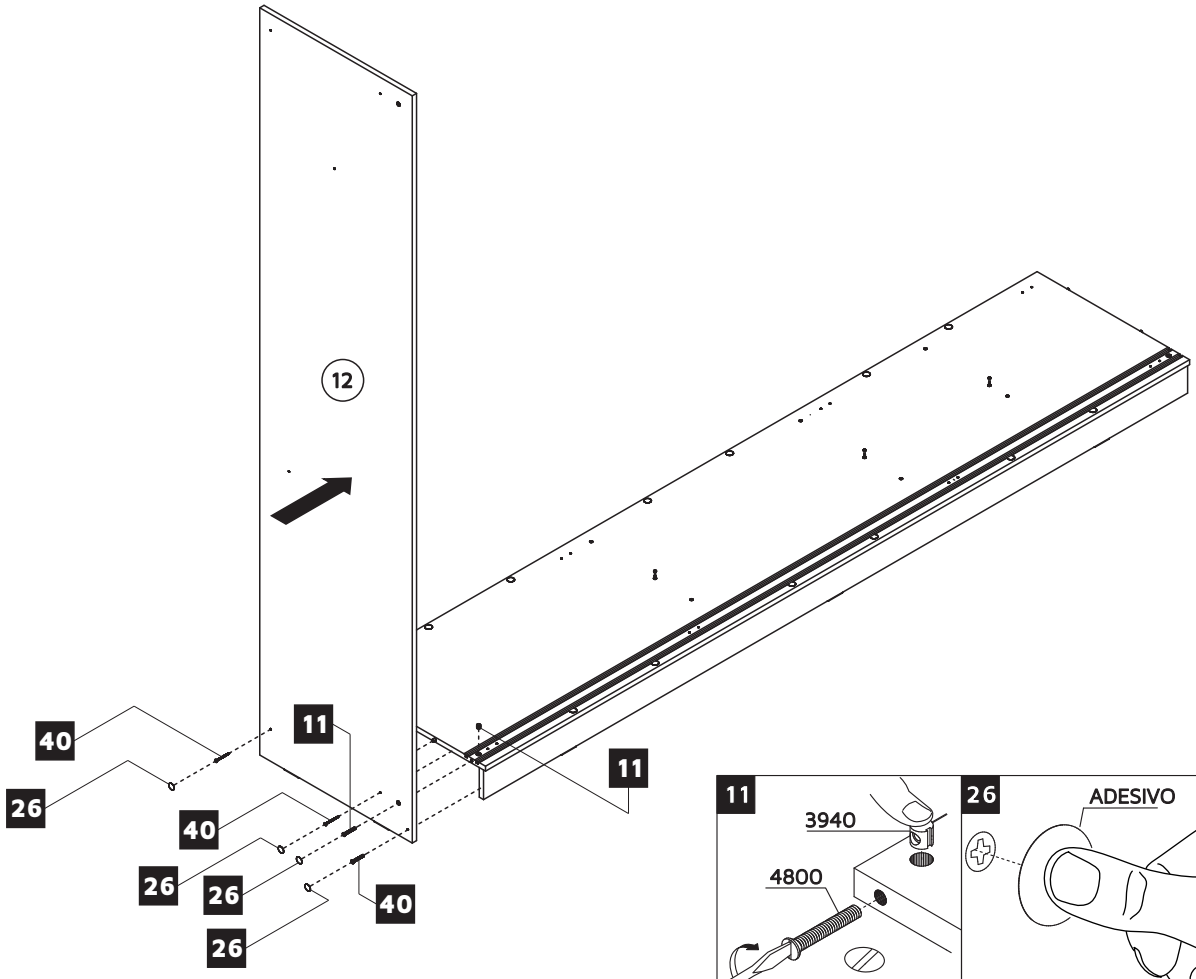
12
40
26
11
40
26
26
40
26
11

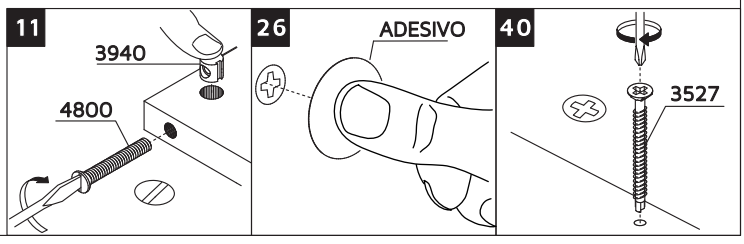
11
3940
4800
26
ADESIVO
40
3527

3

A

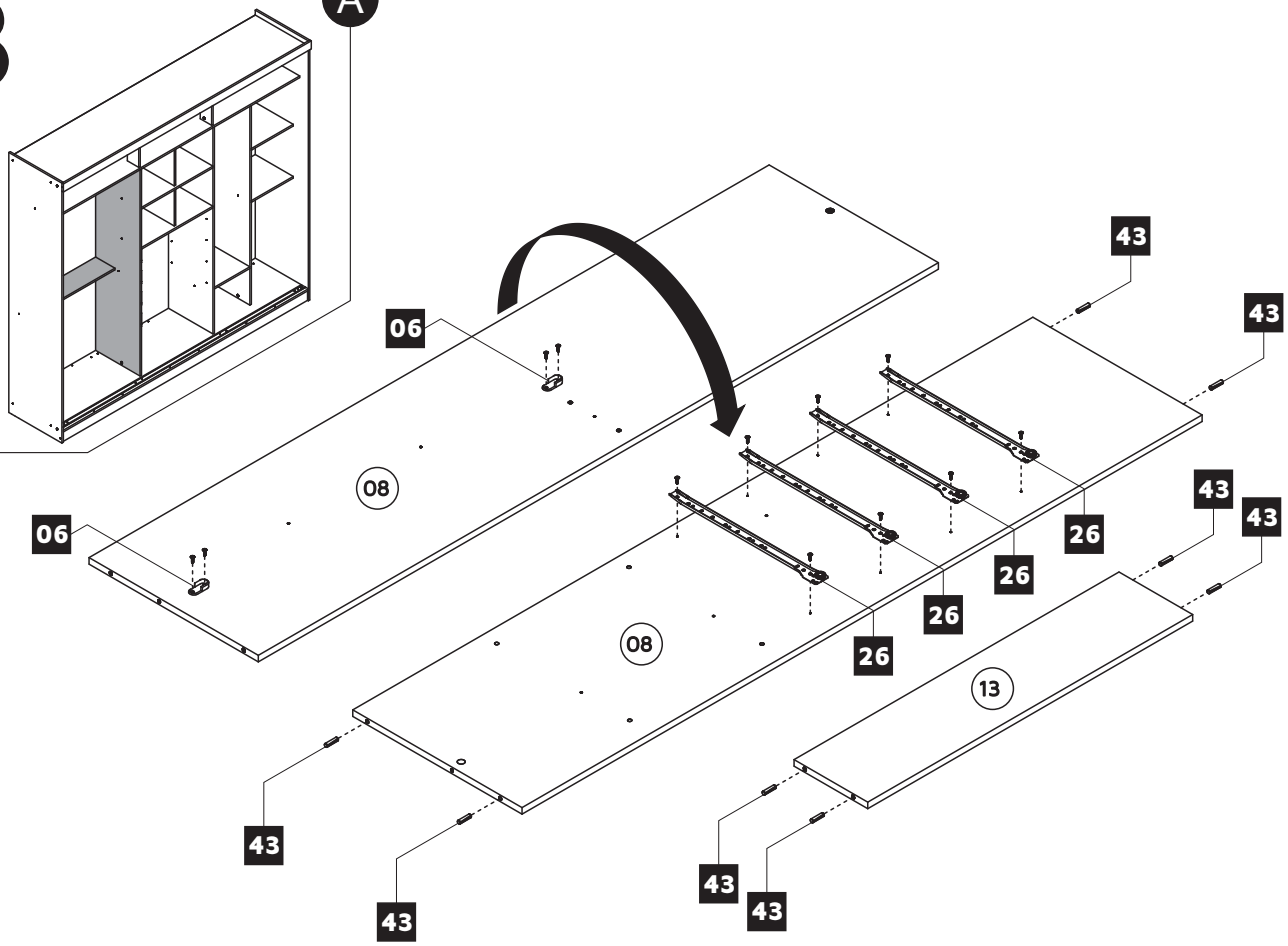
06
08
06
43
43
43
26
26
26
26
43
43
08
13
43
43
43
43

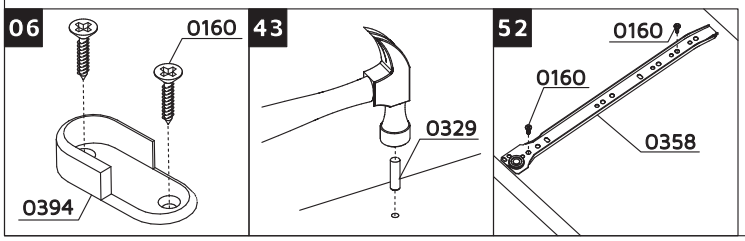
06
0160
0394
43
0329
52
0160
0160
0358

B

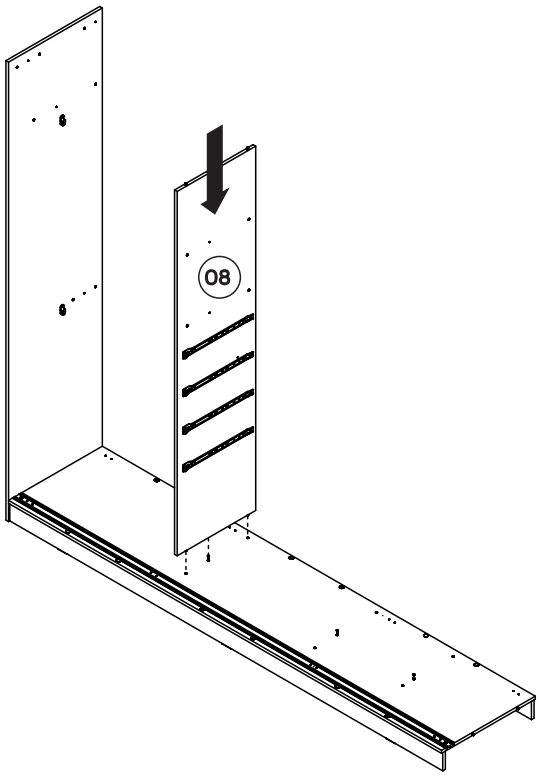
08

C

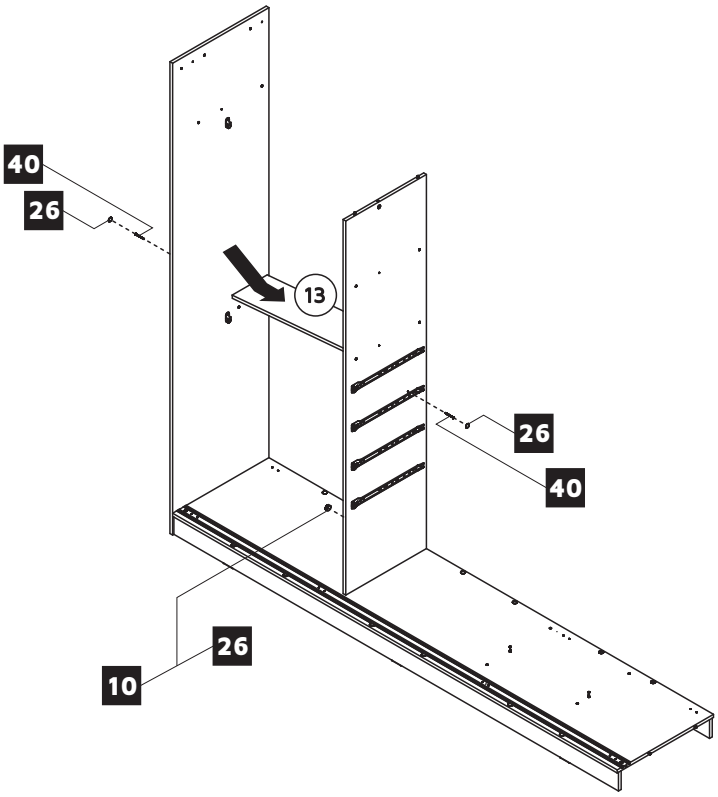
40
26
13
26
40
10
26

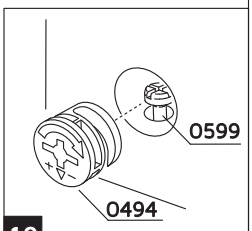
0599
0494

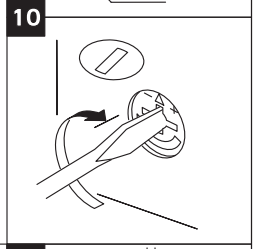
10

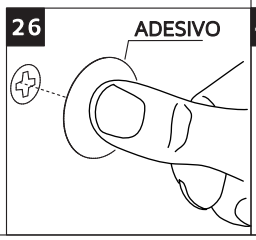
26
ADESIVO

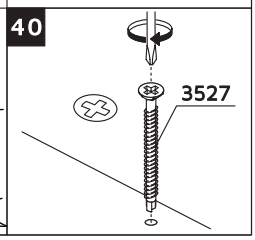
40
3527

4

A

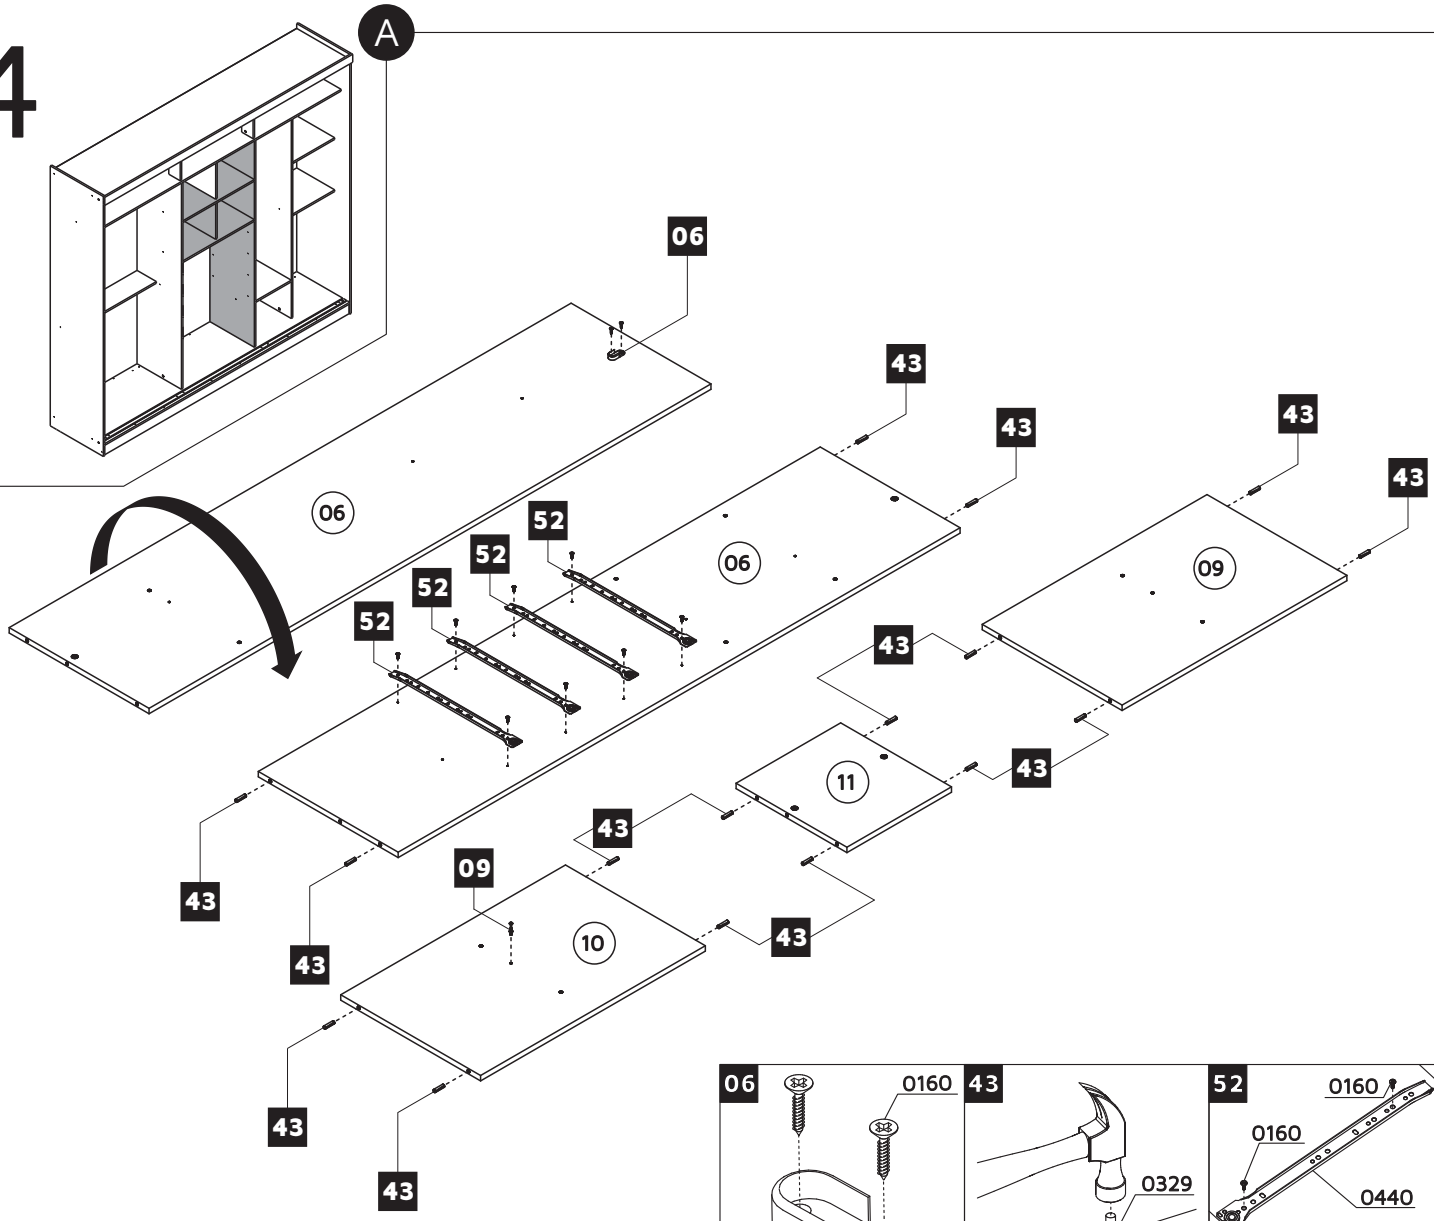
06
43
43
43
43
06
52
52
52
52
06
09
43
43
11
43
09
43
43
10
43
43
43

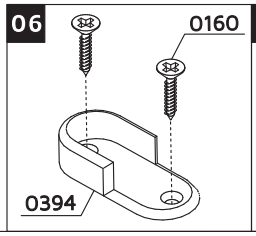
06
0160
0394

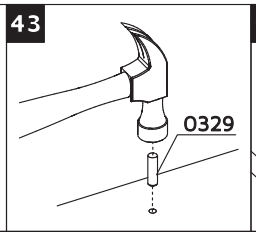
43
0329

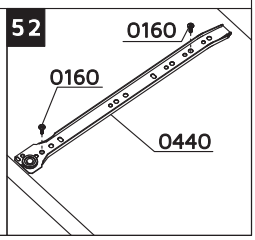
52
0160
0160
0440

B

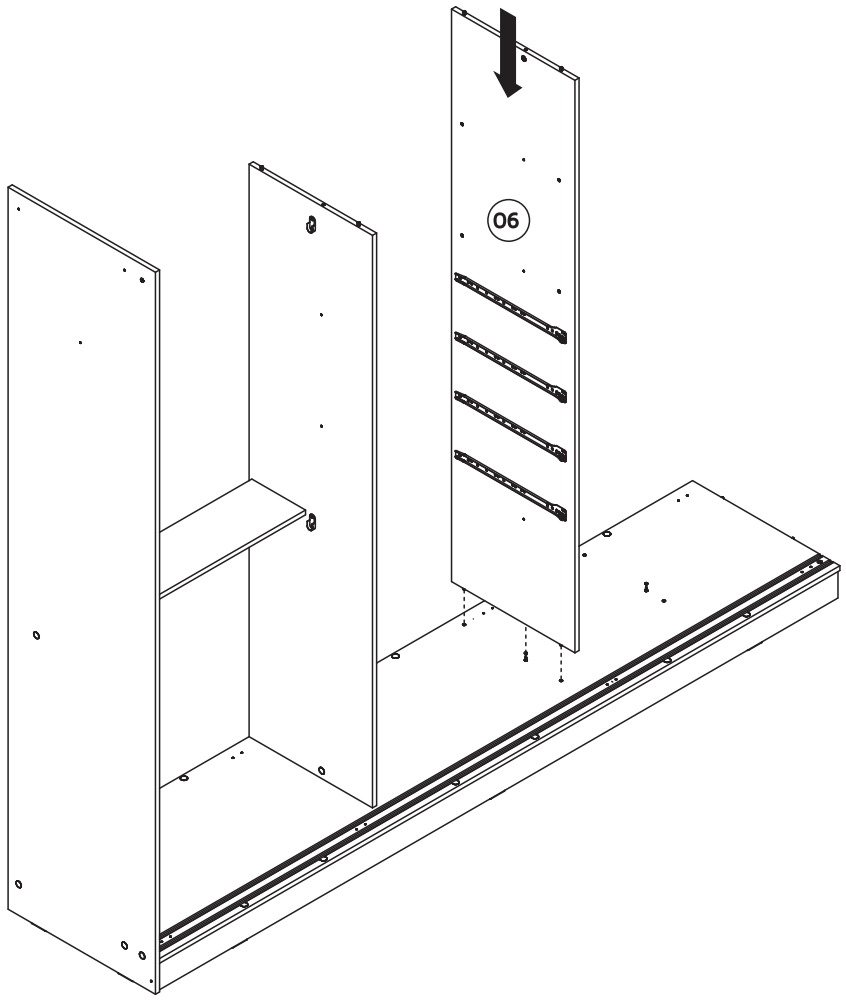

C

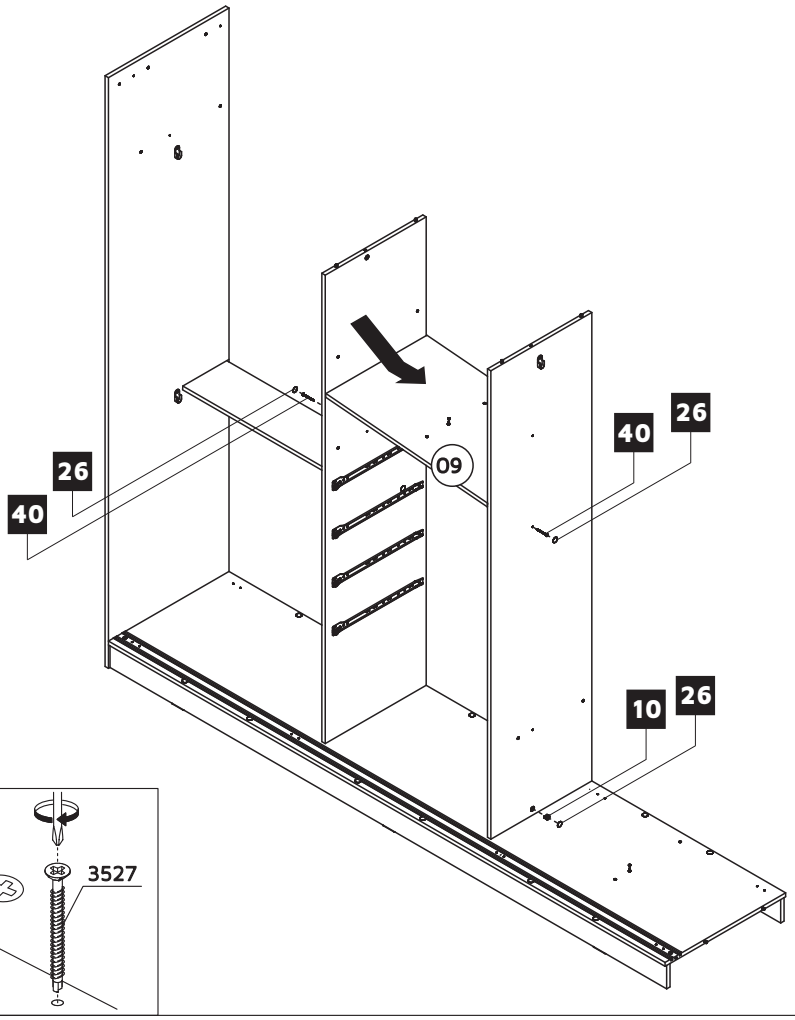

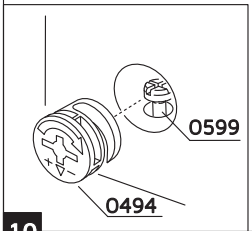

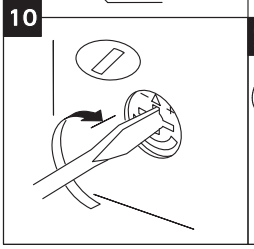

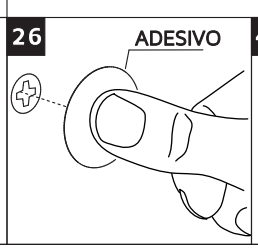

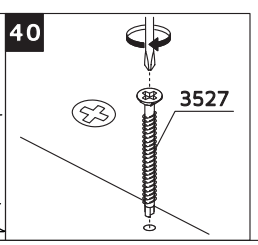

D

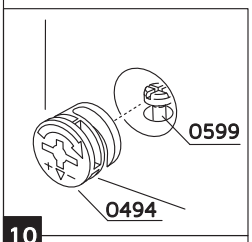

10

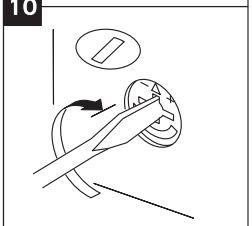

26

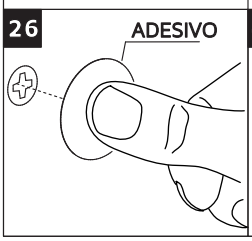

40

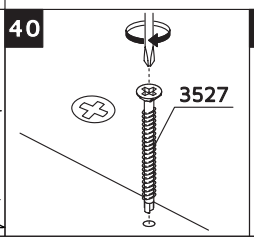

56

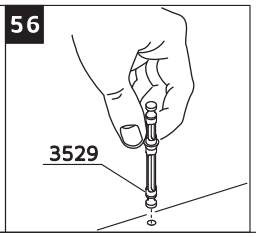

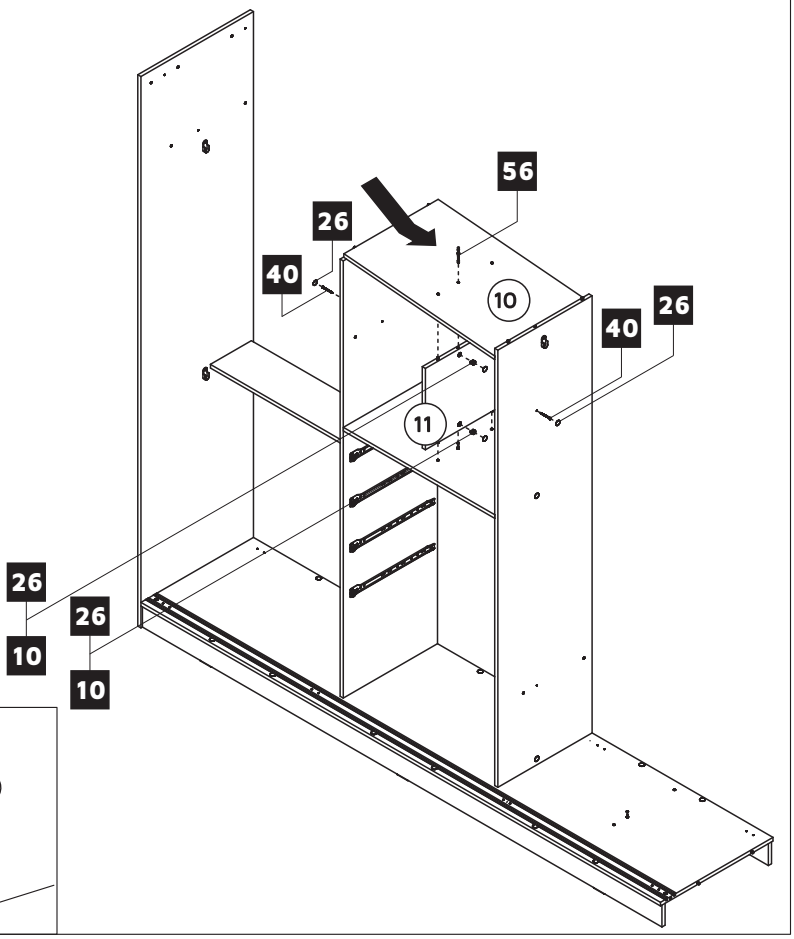

5

A

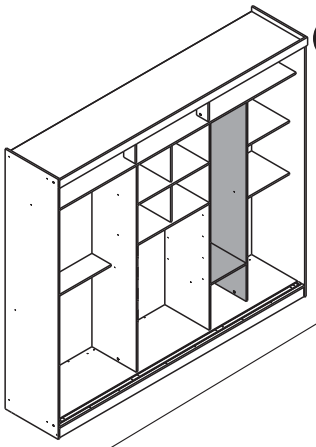

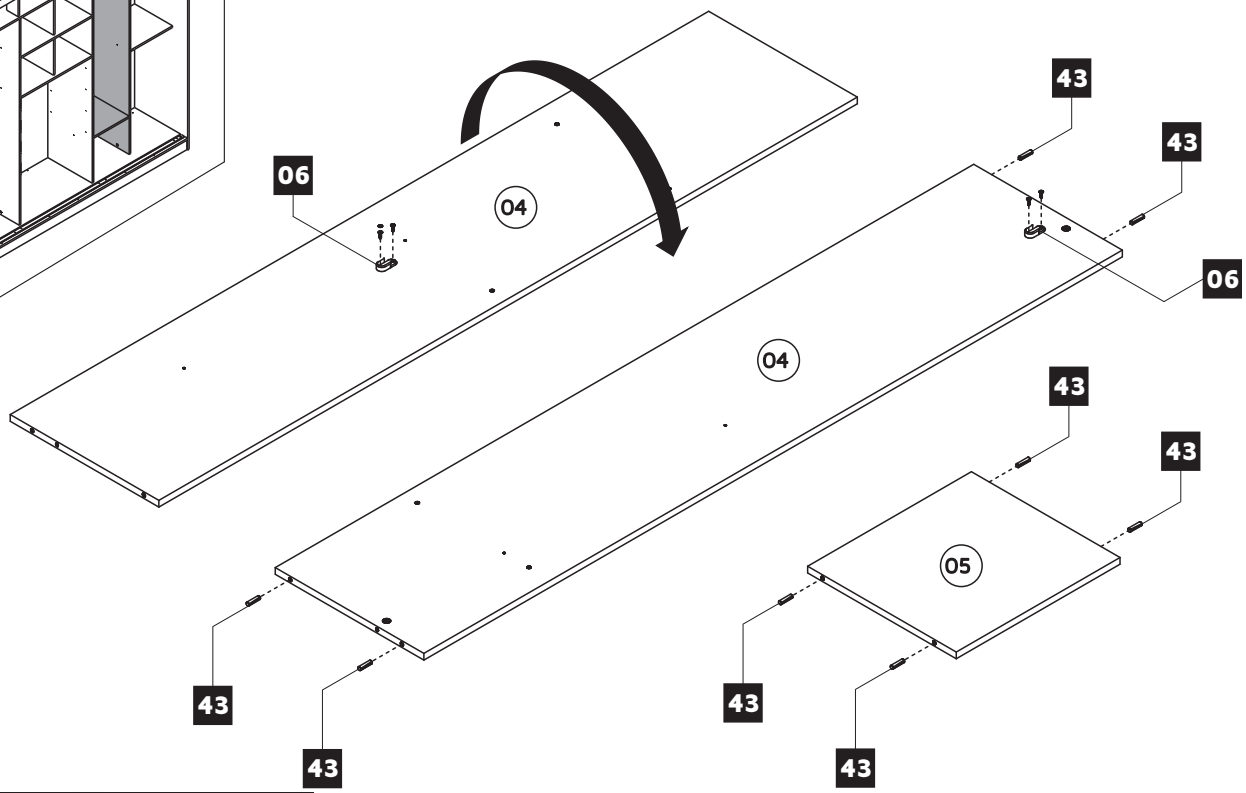

06

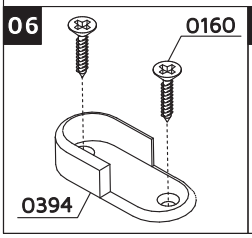

43

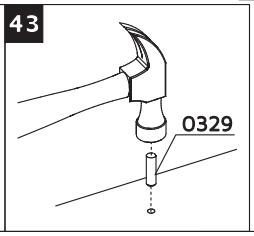

B

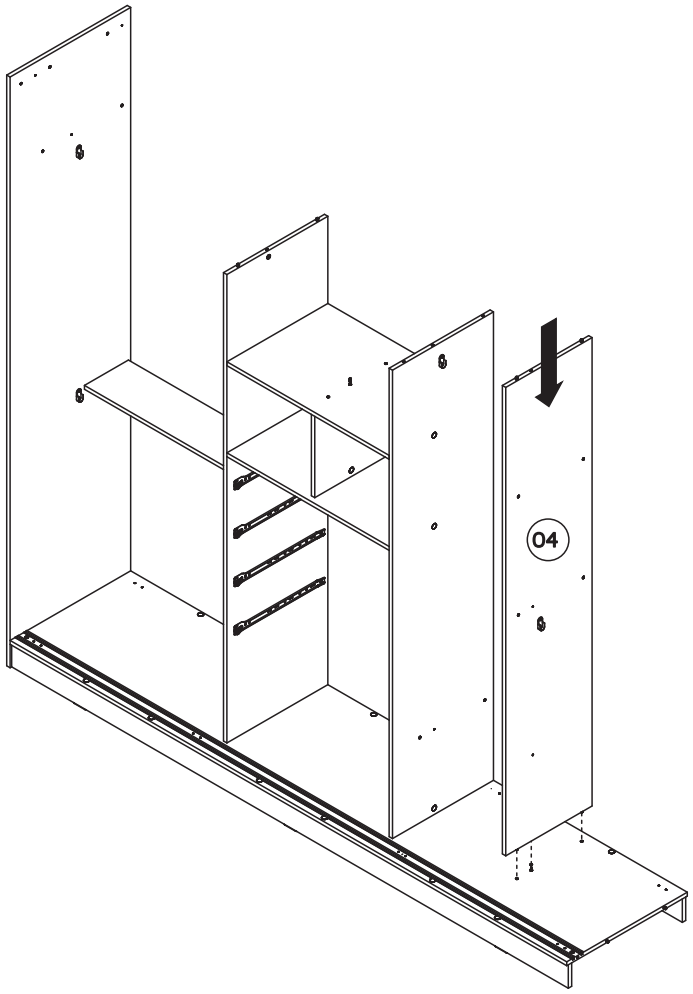

C

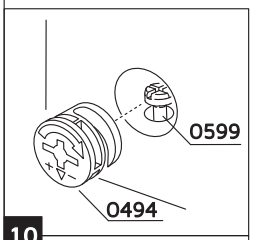

10

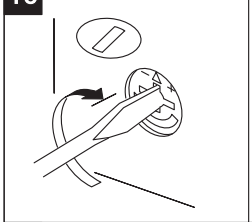

26

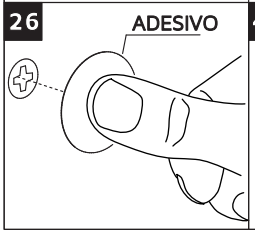

40

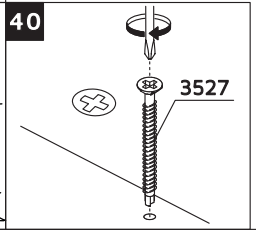

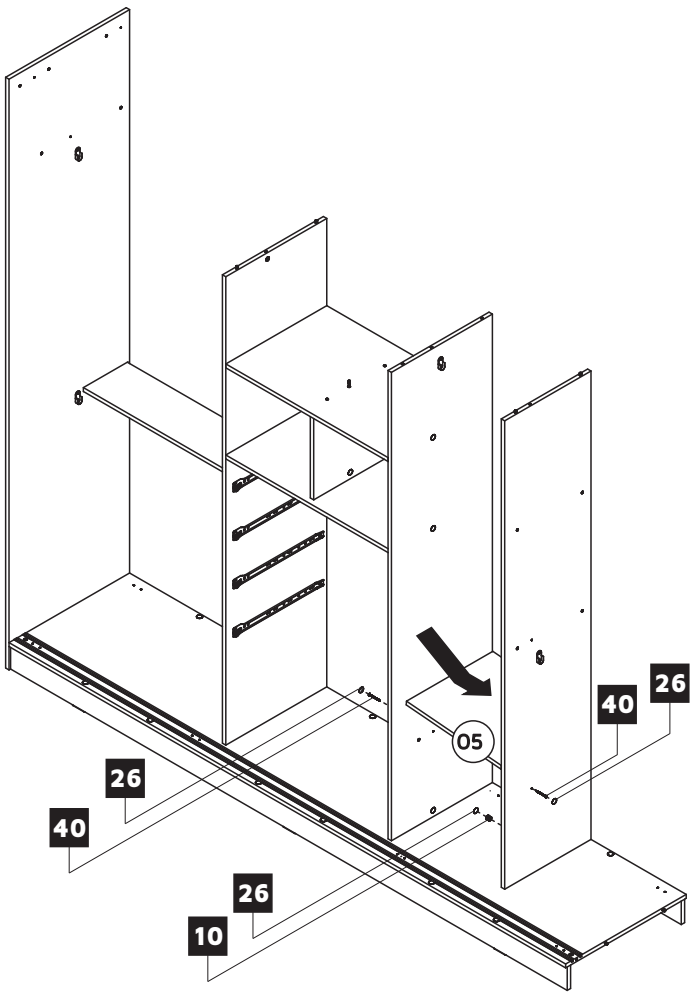

6

A

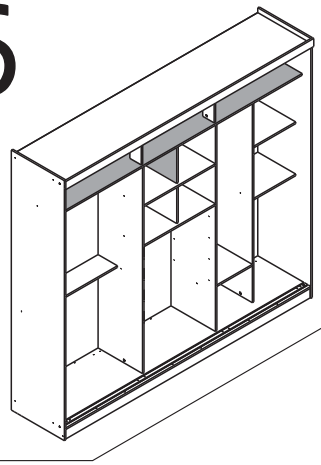

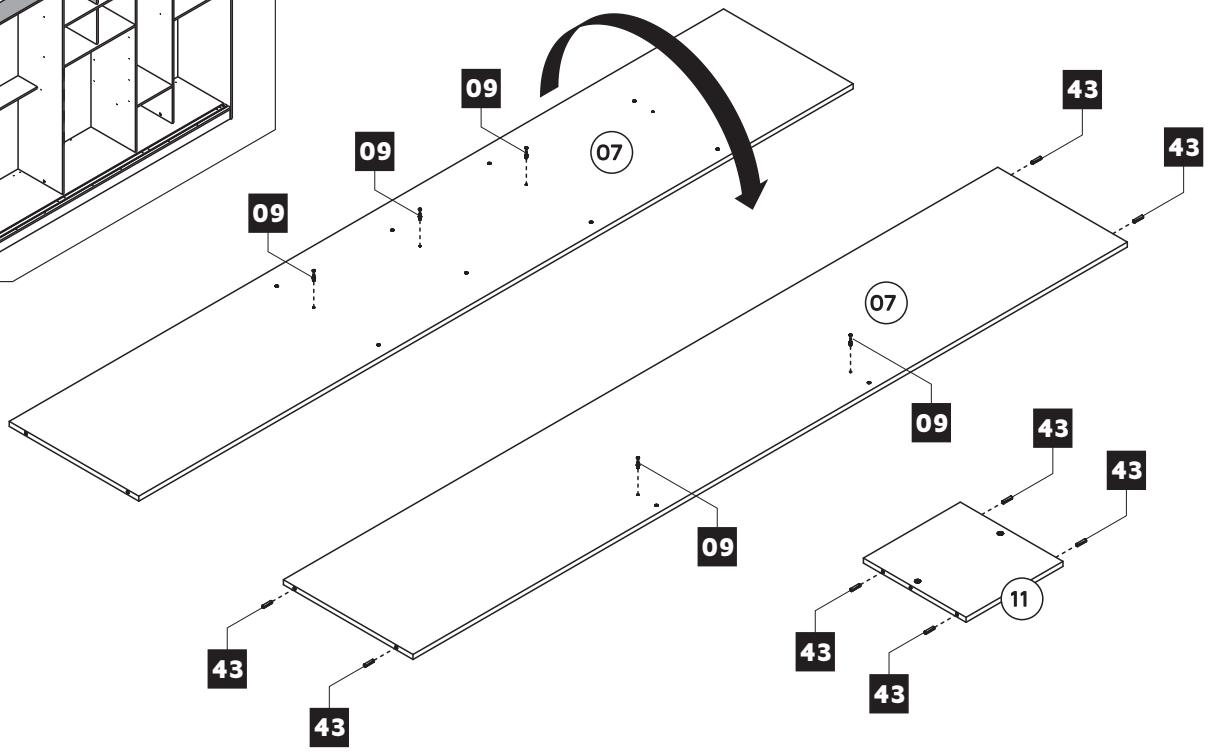

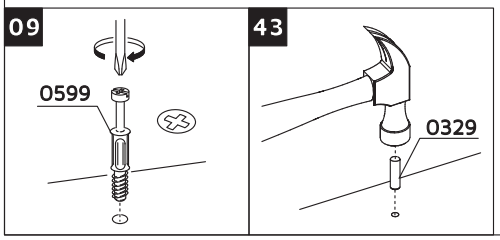

B

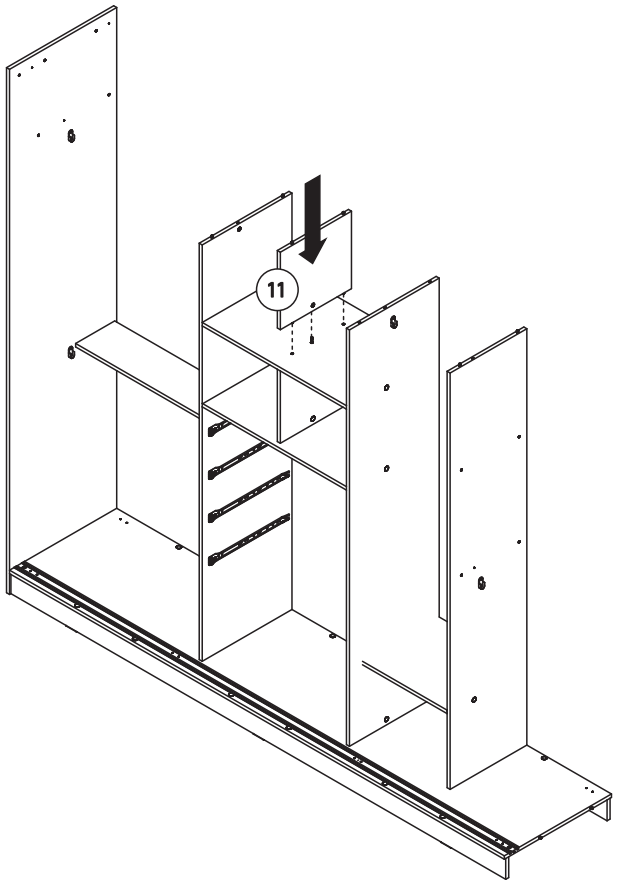

C

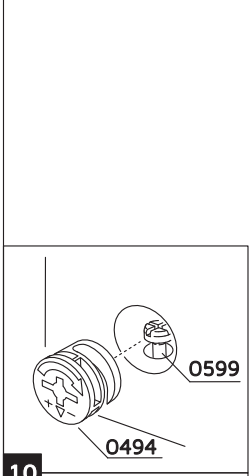

10

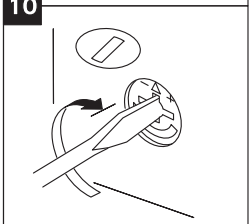

26

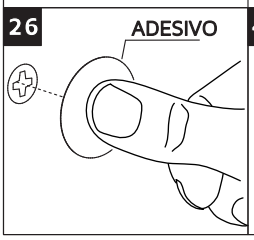

40

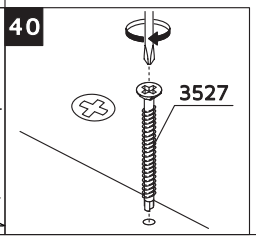

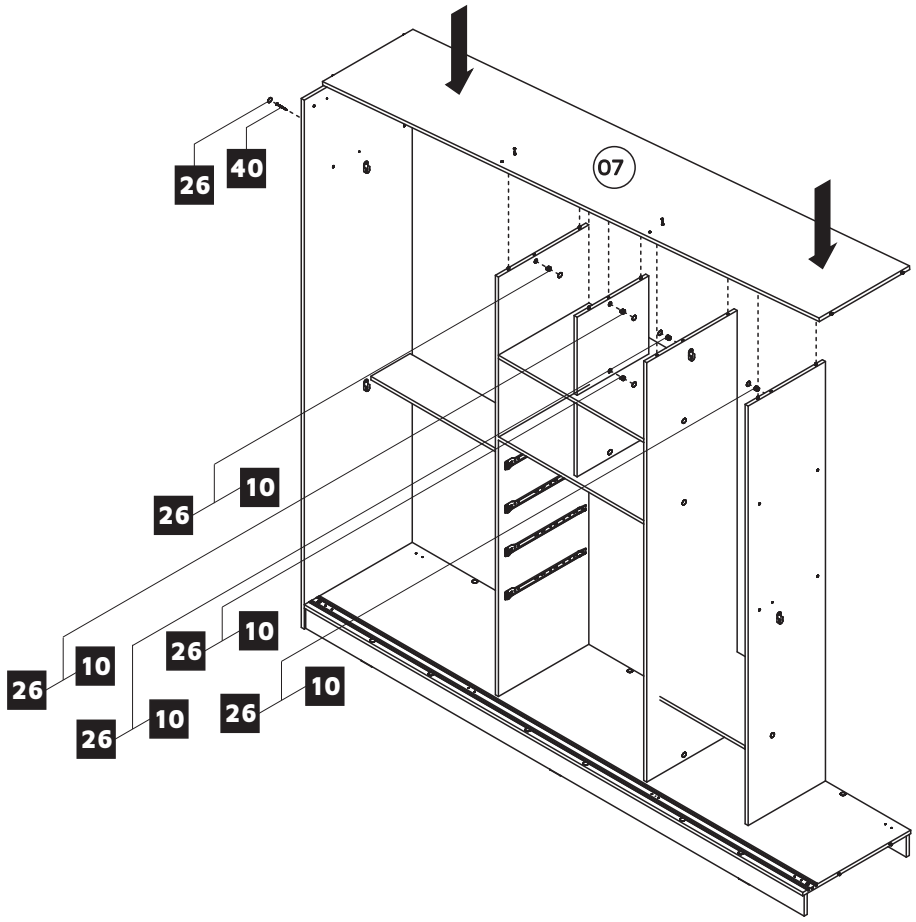

7

A

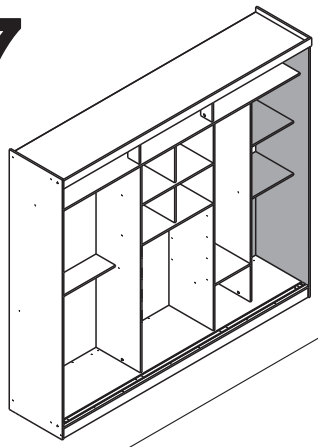

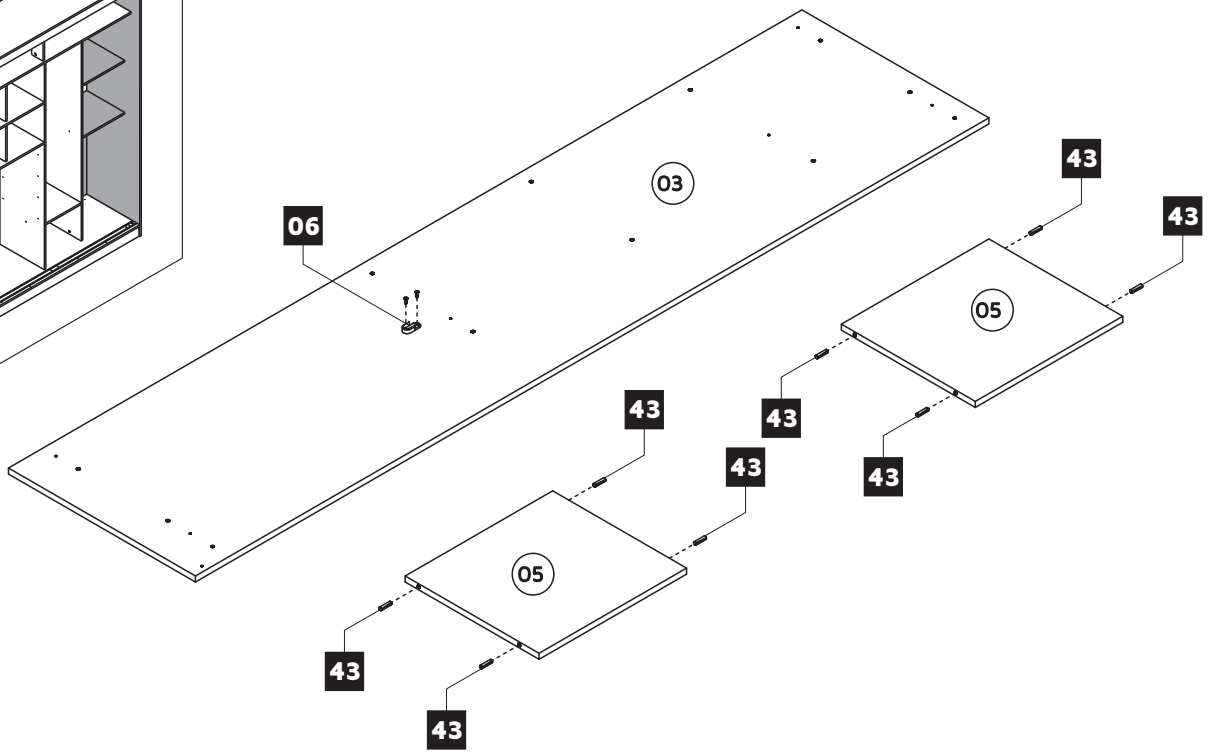

06

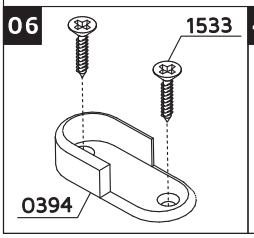

43

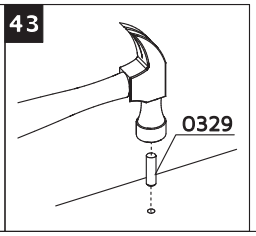

B

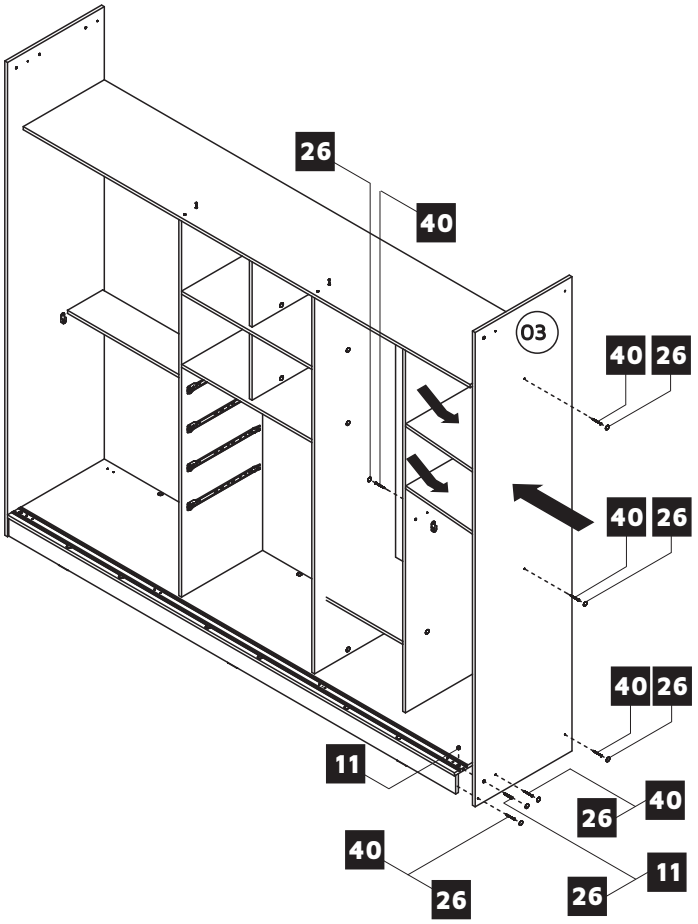
26
40
03
40 26
40 26
40 26
11
40 26
26 40
40 26
26 11

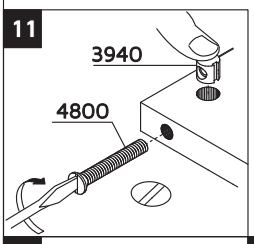
11
3940
4800

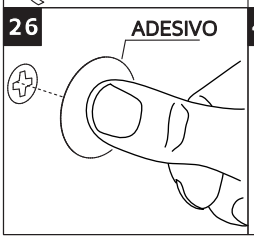
26
ADESIVO

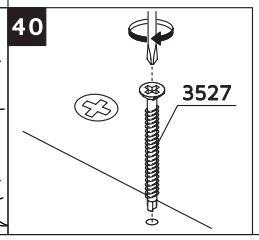
40
3527

8

A

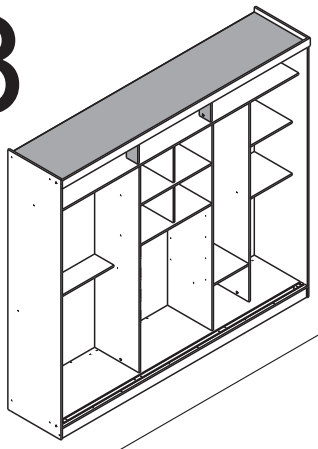

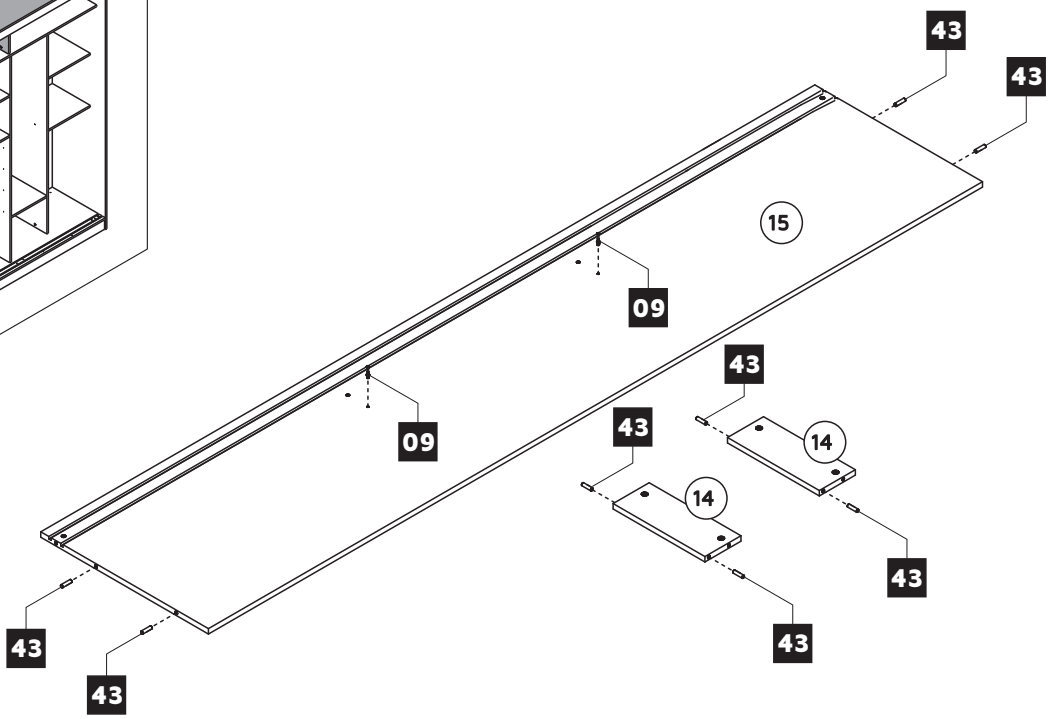
43
43
15
09
09
43
43
14
14
43
43
43

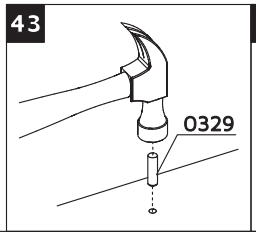
43
0329

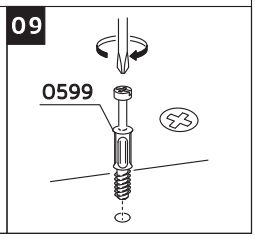
09
0599

B

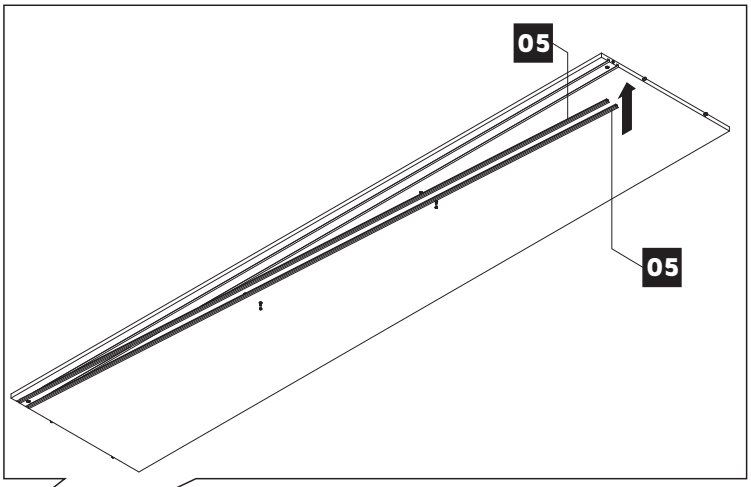
05
05

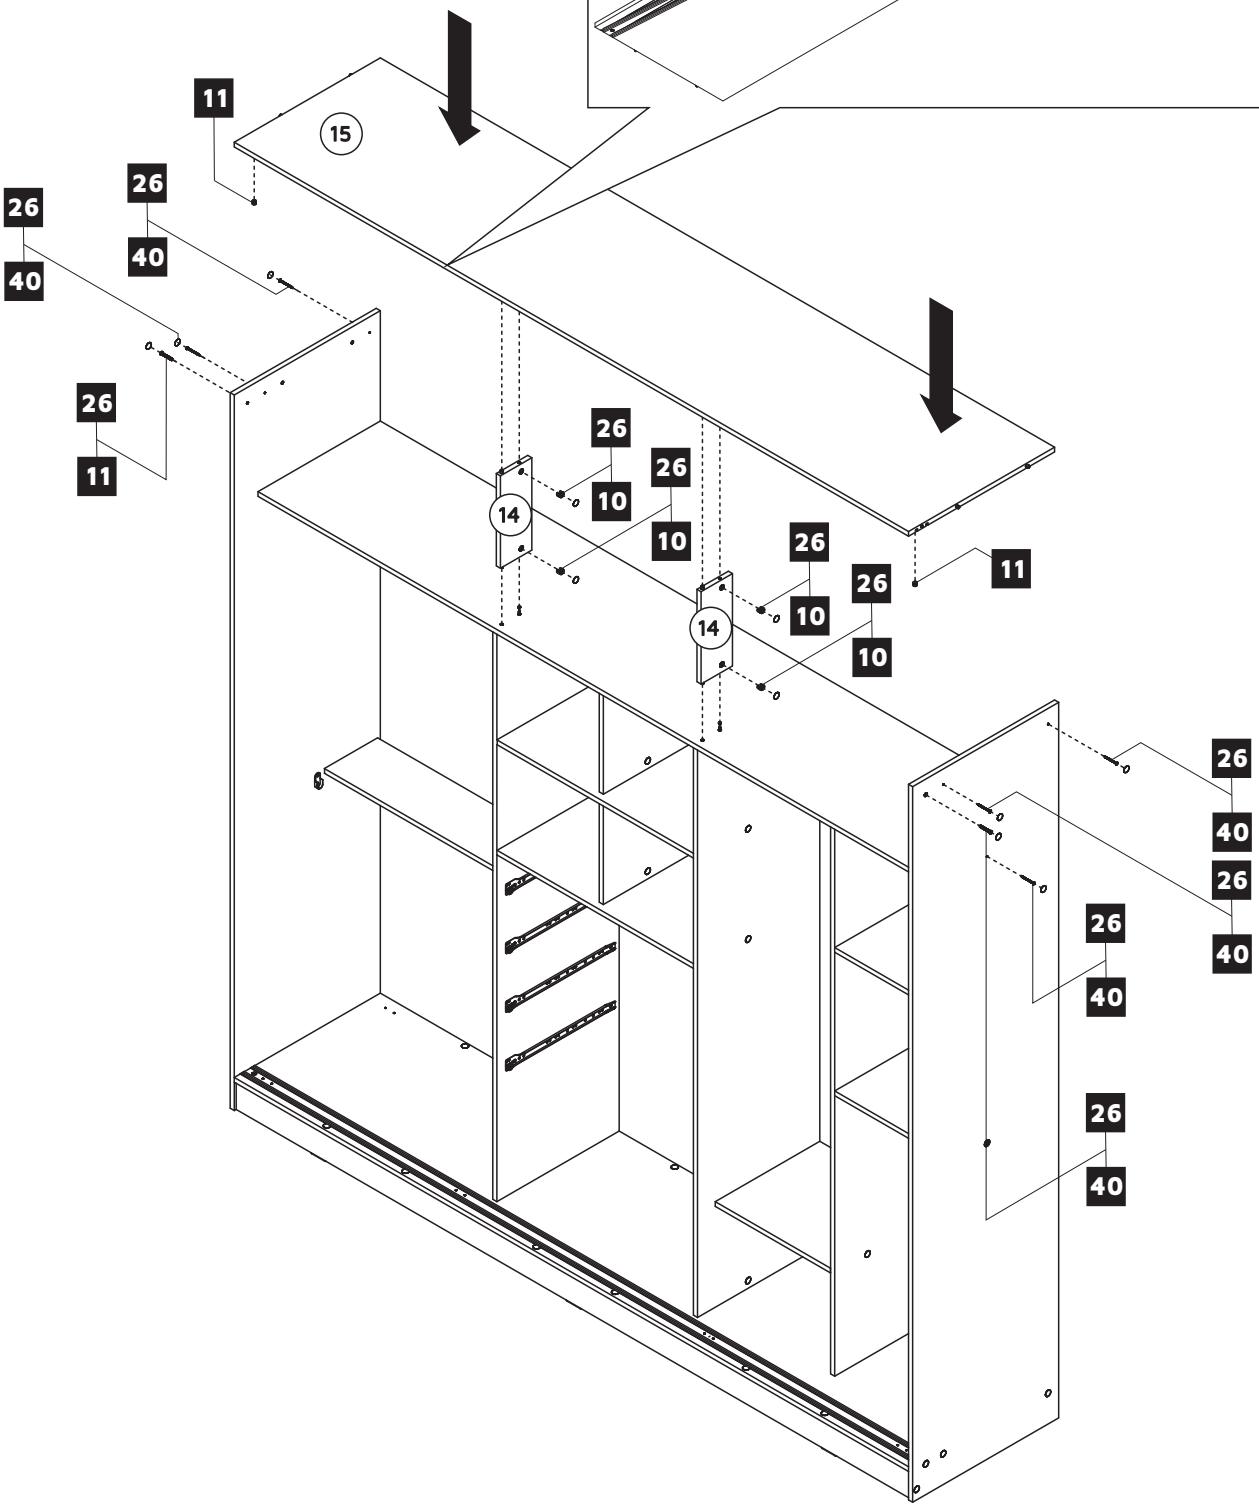
11
15
26
40
26
40
26
11
26
10
26
10
14
26
10
26
10
14
11
26
40
26
40
26
40
26
40

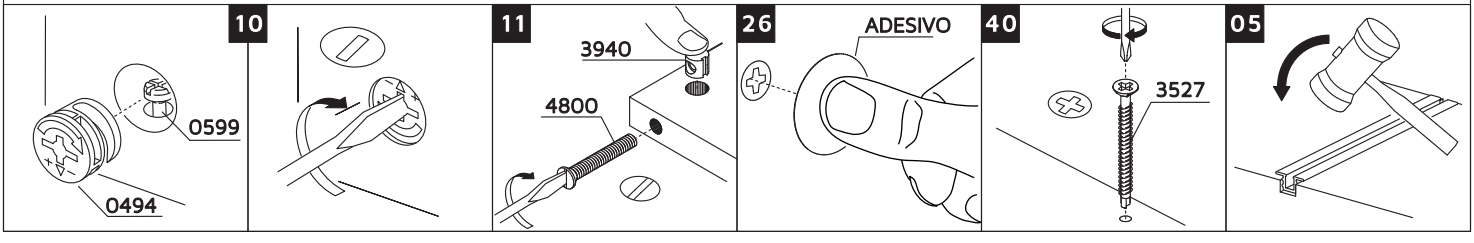
10
0599
0494
11
3940
4800
26
ADESIVO
40
3527
05

9

A

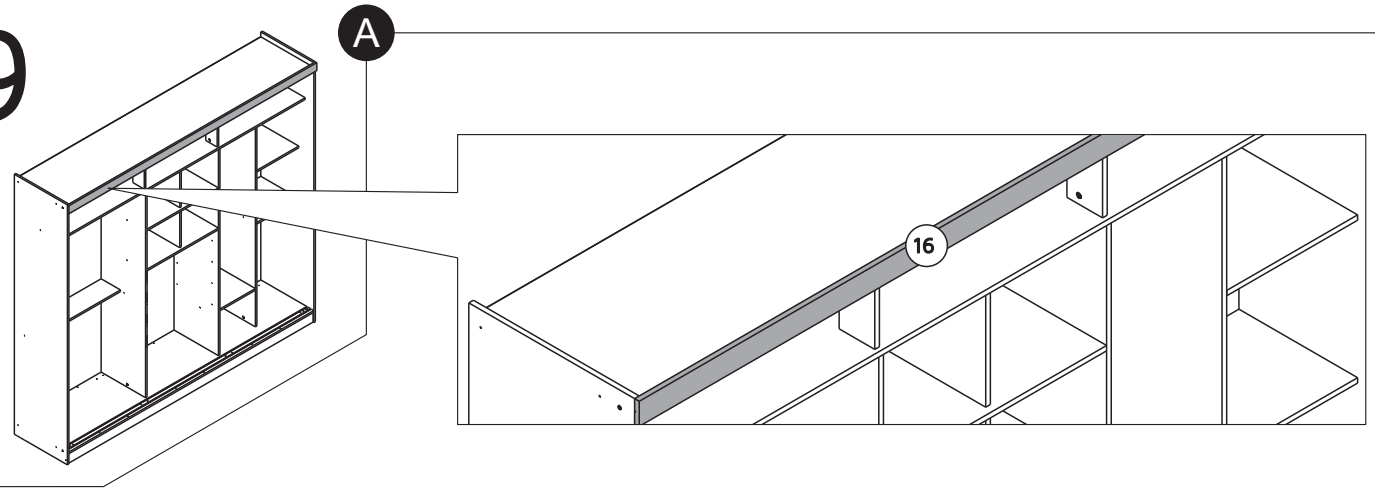

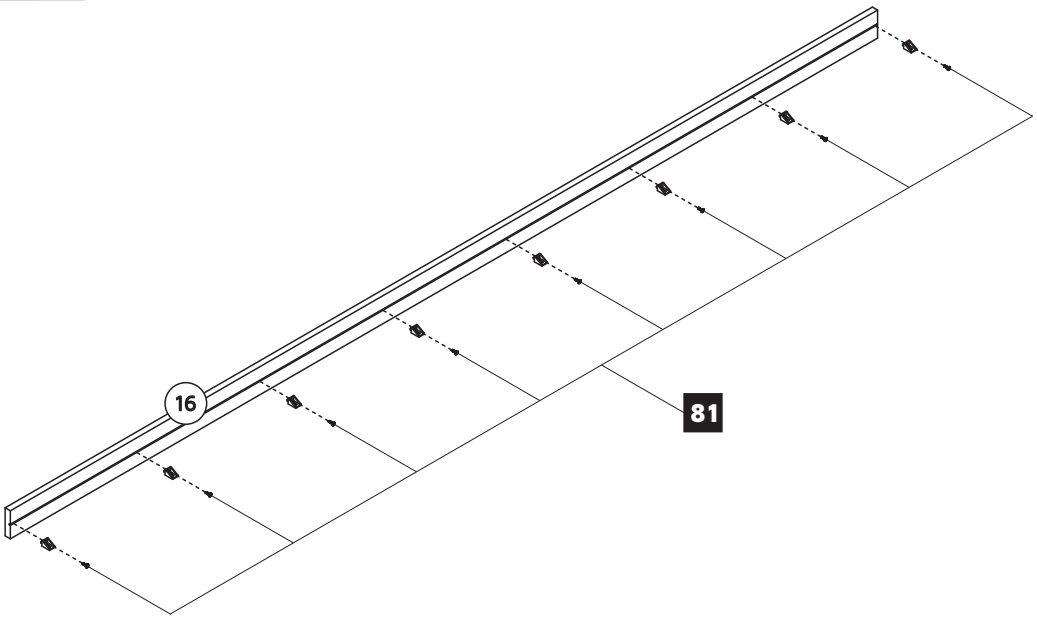

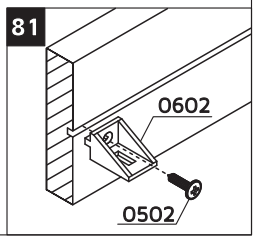

B

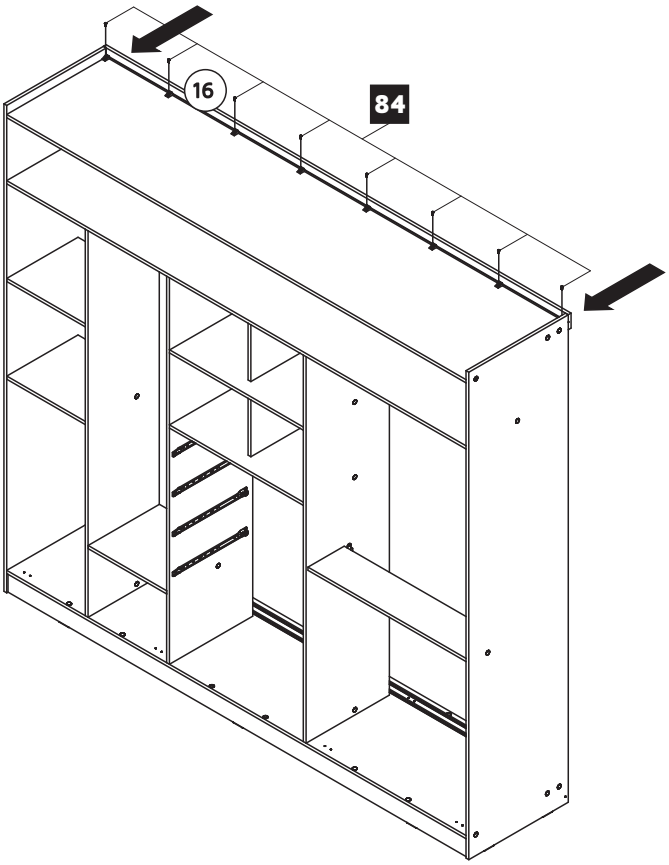

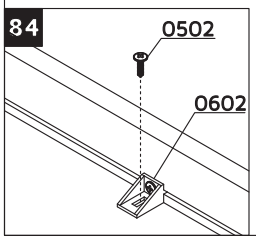

10

A

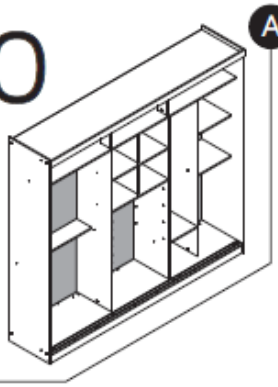

Position the holes Ø4,5 crossing:
Measurements in millimeters.

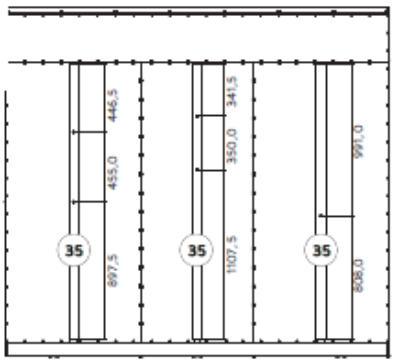

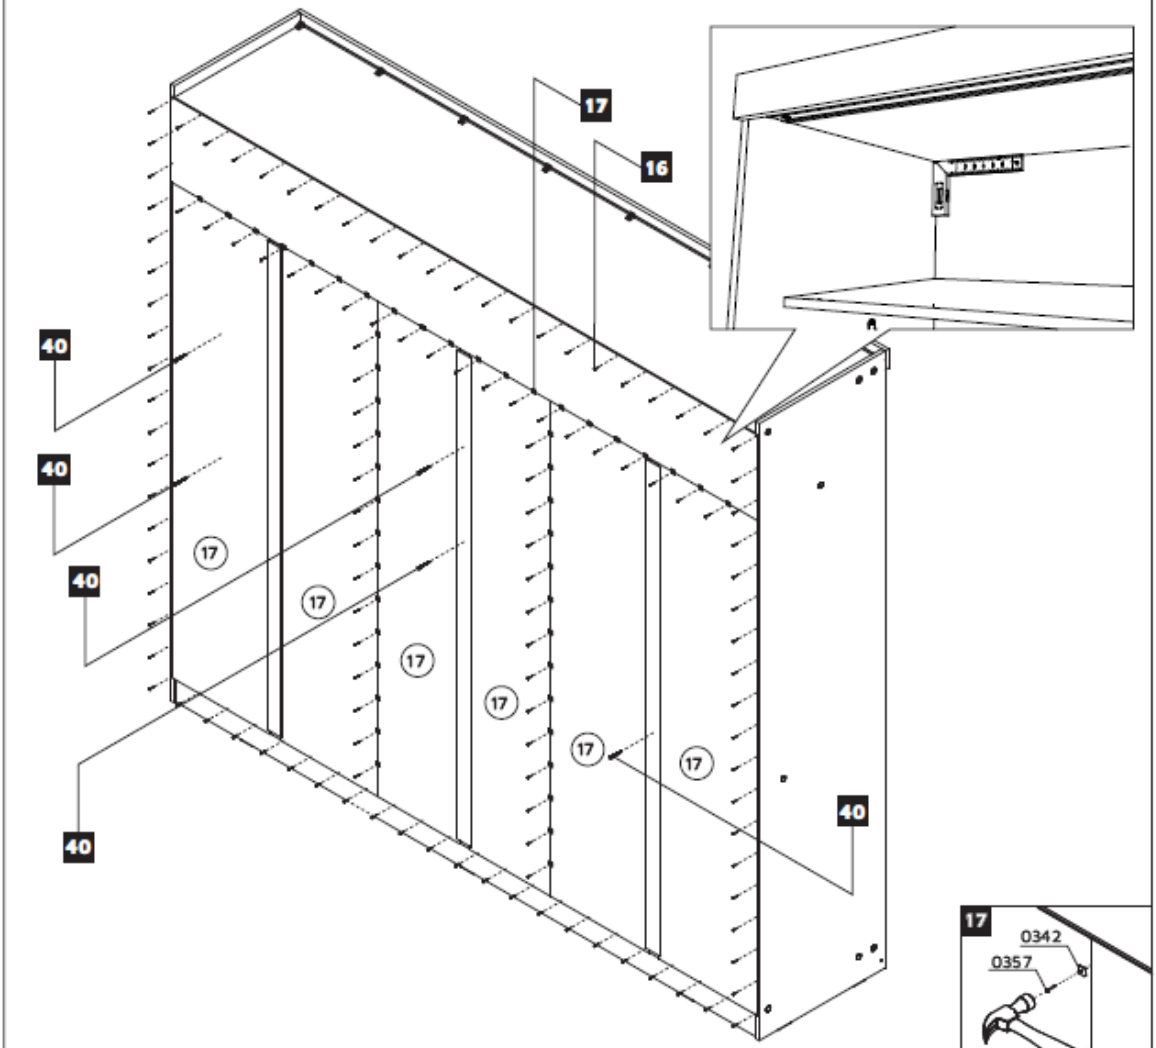

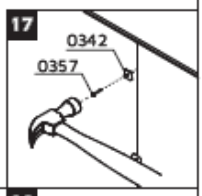

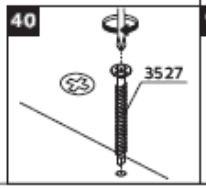

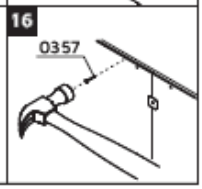

11

A

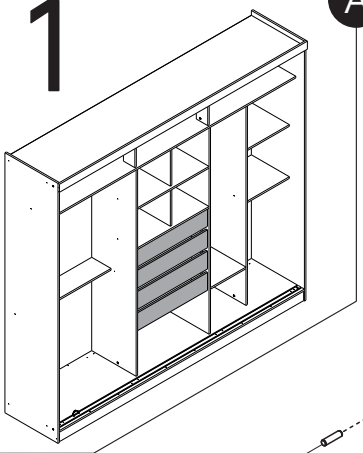

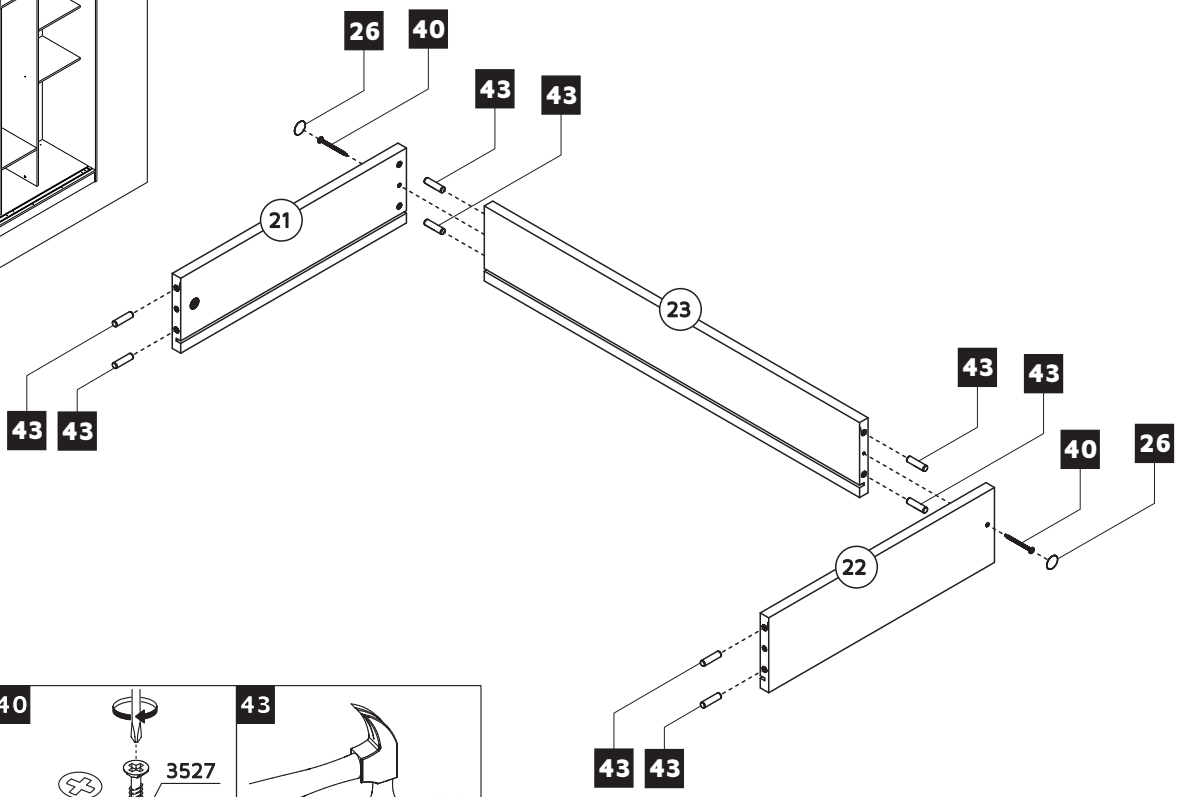
26
40
43
43
21
23
43
43
43
43
40
26
22
43
43

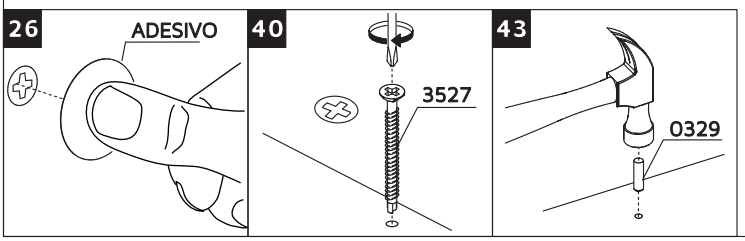
26
ADESIVO
40
3527
43
0329

B

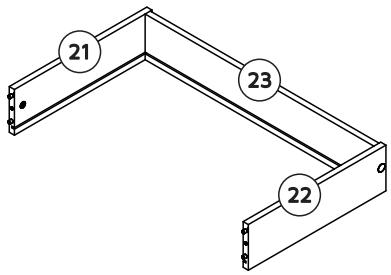
21
23
22

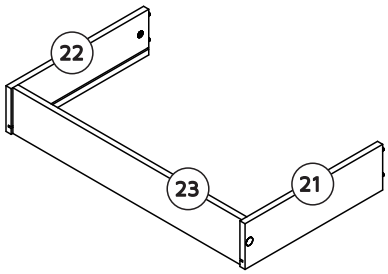
22
23
21

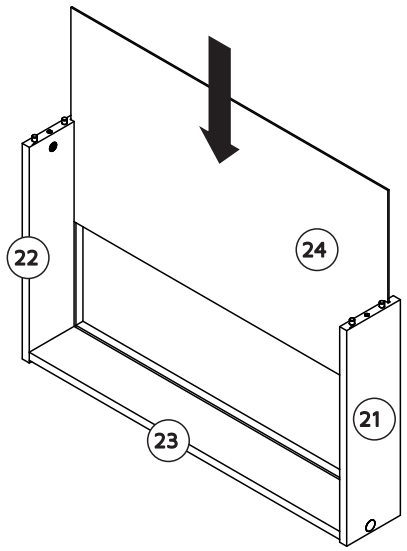
22
24
21
23

C

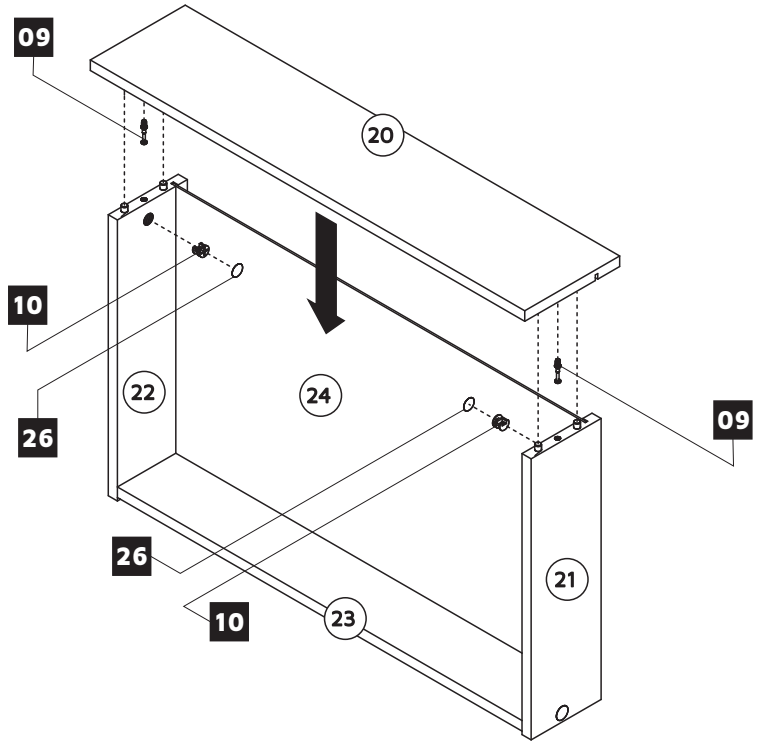
09
20
10
22
24
26
09
26
21
10
23

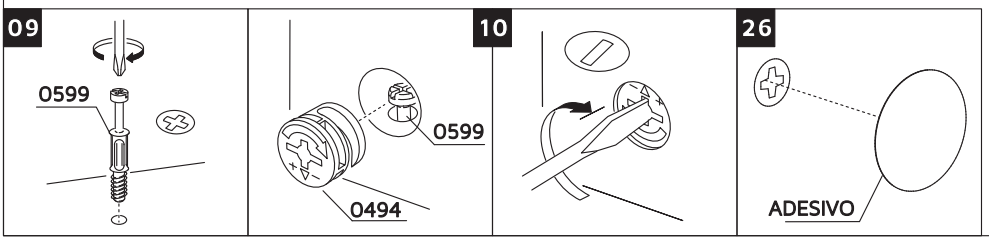
09
0599
10
0599
0494
26
ADESIVO

D

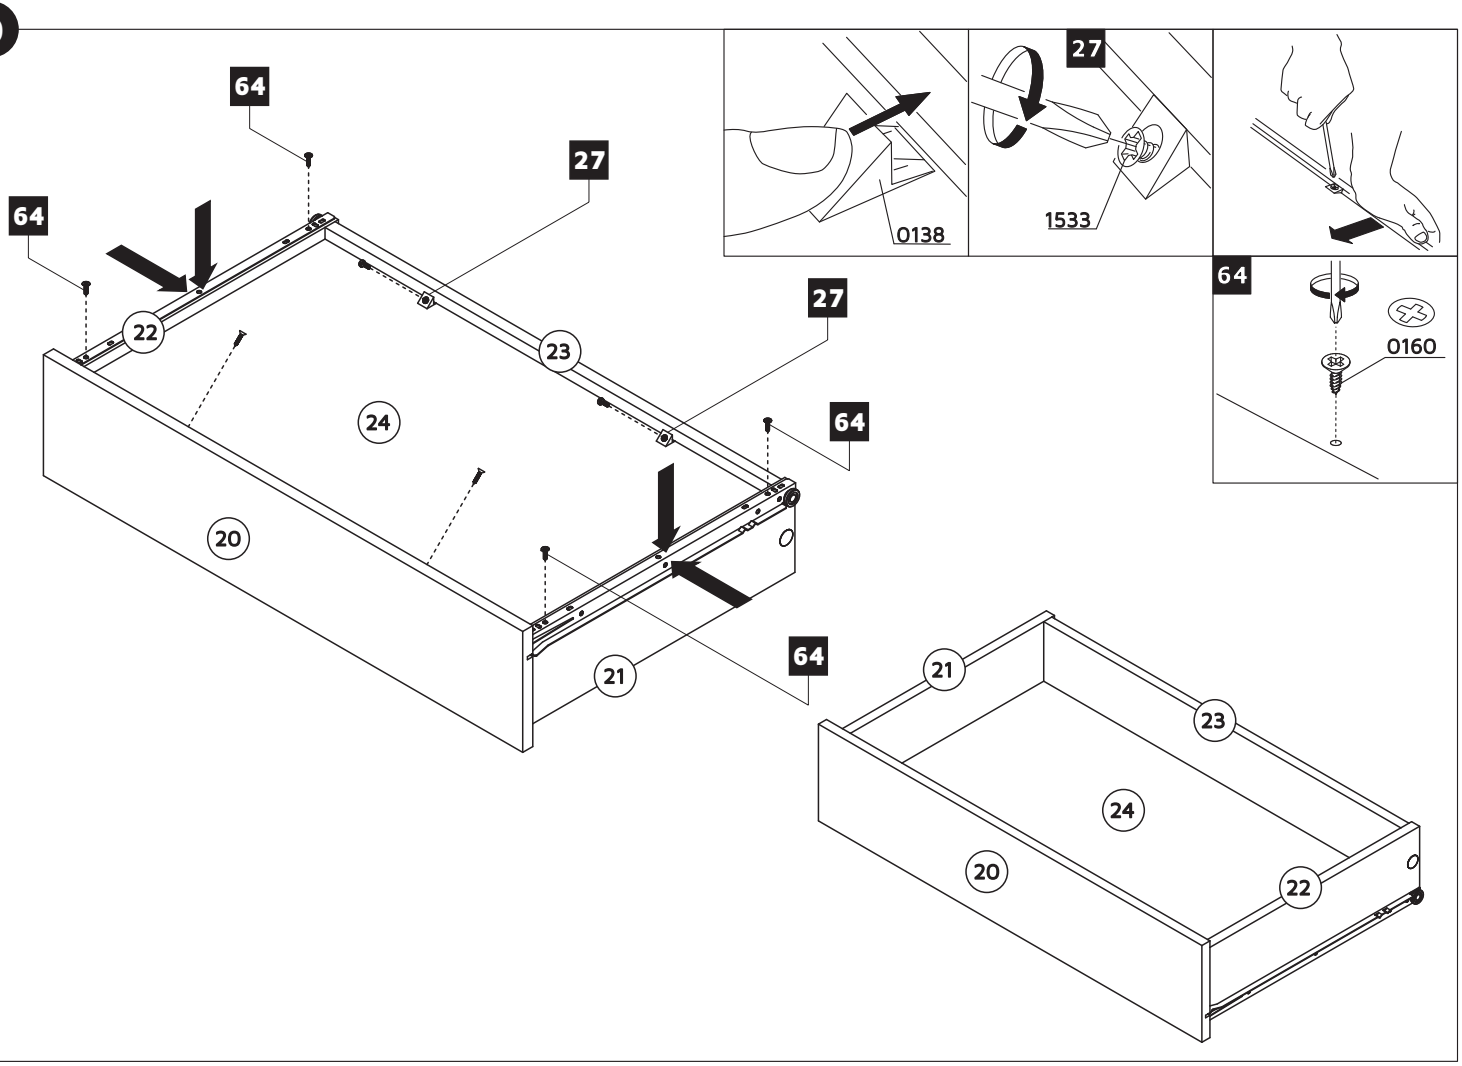
64
27
64
22
23
24
20
21
0138
27
1533
64
0160
27
64
64
21
21
23
24
20
22

E

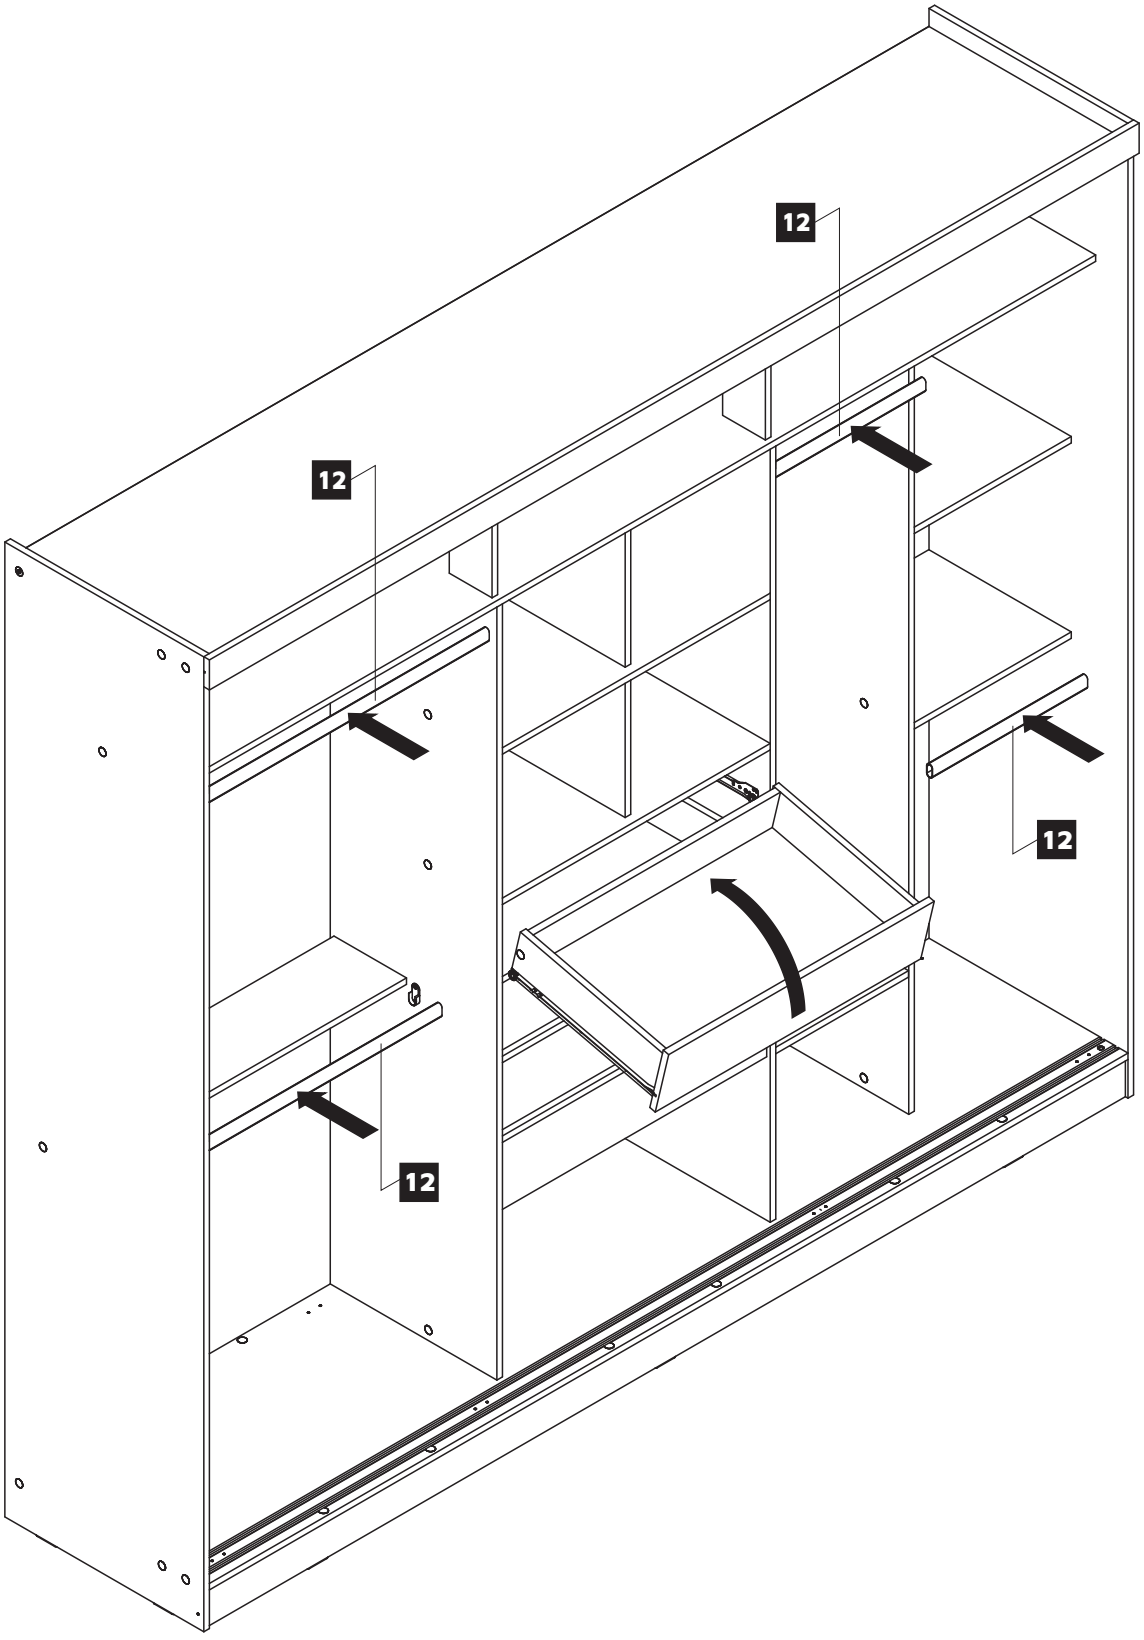

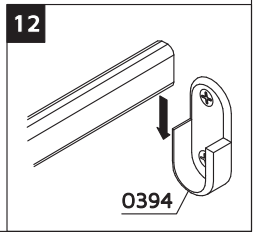

12

A

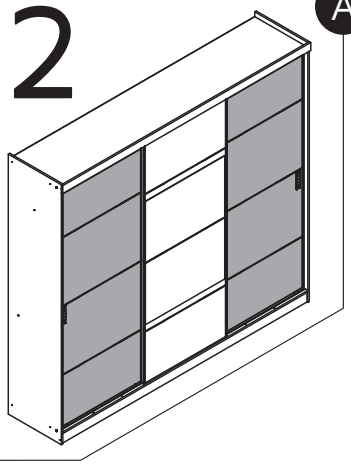

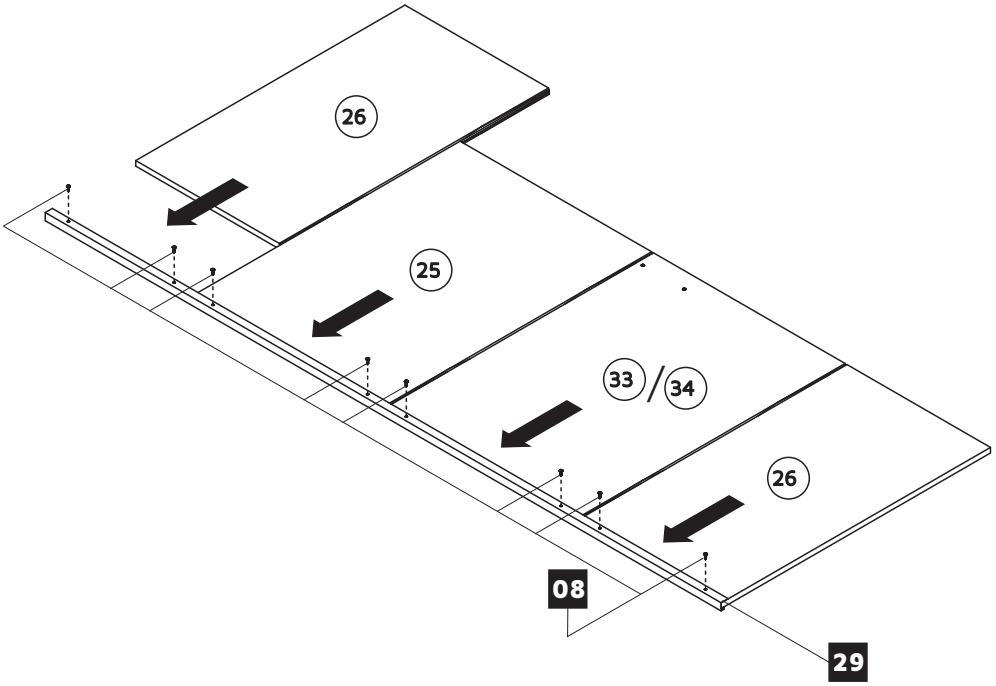
26
25
33 / 34
26
08
29

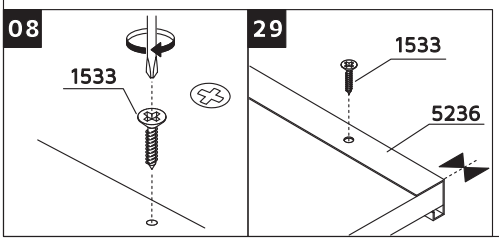
08
1533
29
1533
5236

B

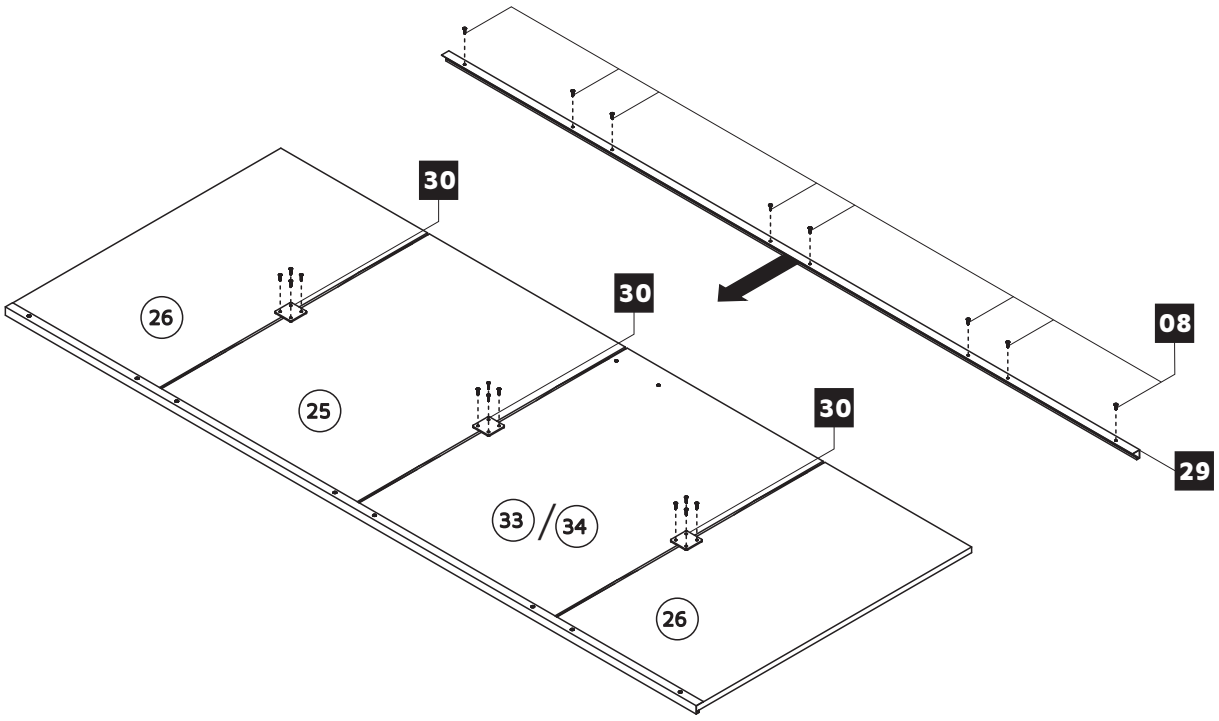
30
30
30
26
25
33 / 34
26
08
29

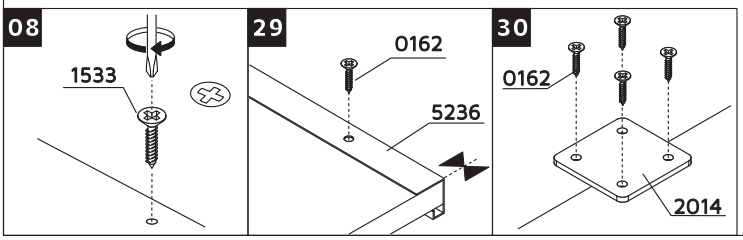
08
1533
29
0162
5236
30
0162
2014

C

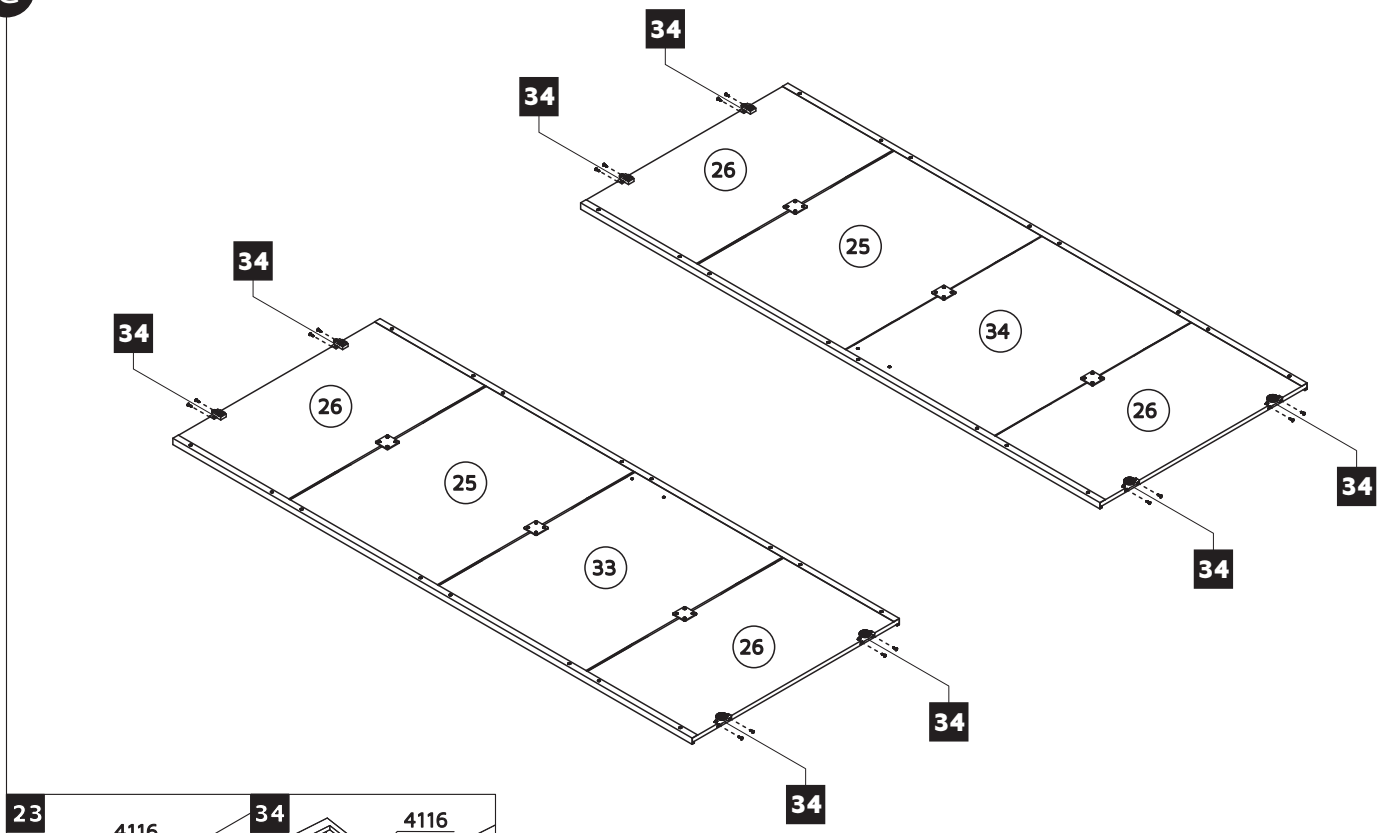
34
34
26
25
34
26
34
34
34
26
25
33
26
34
34

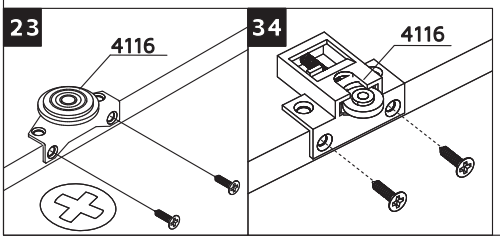
23
4116
34
4116

D

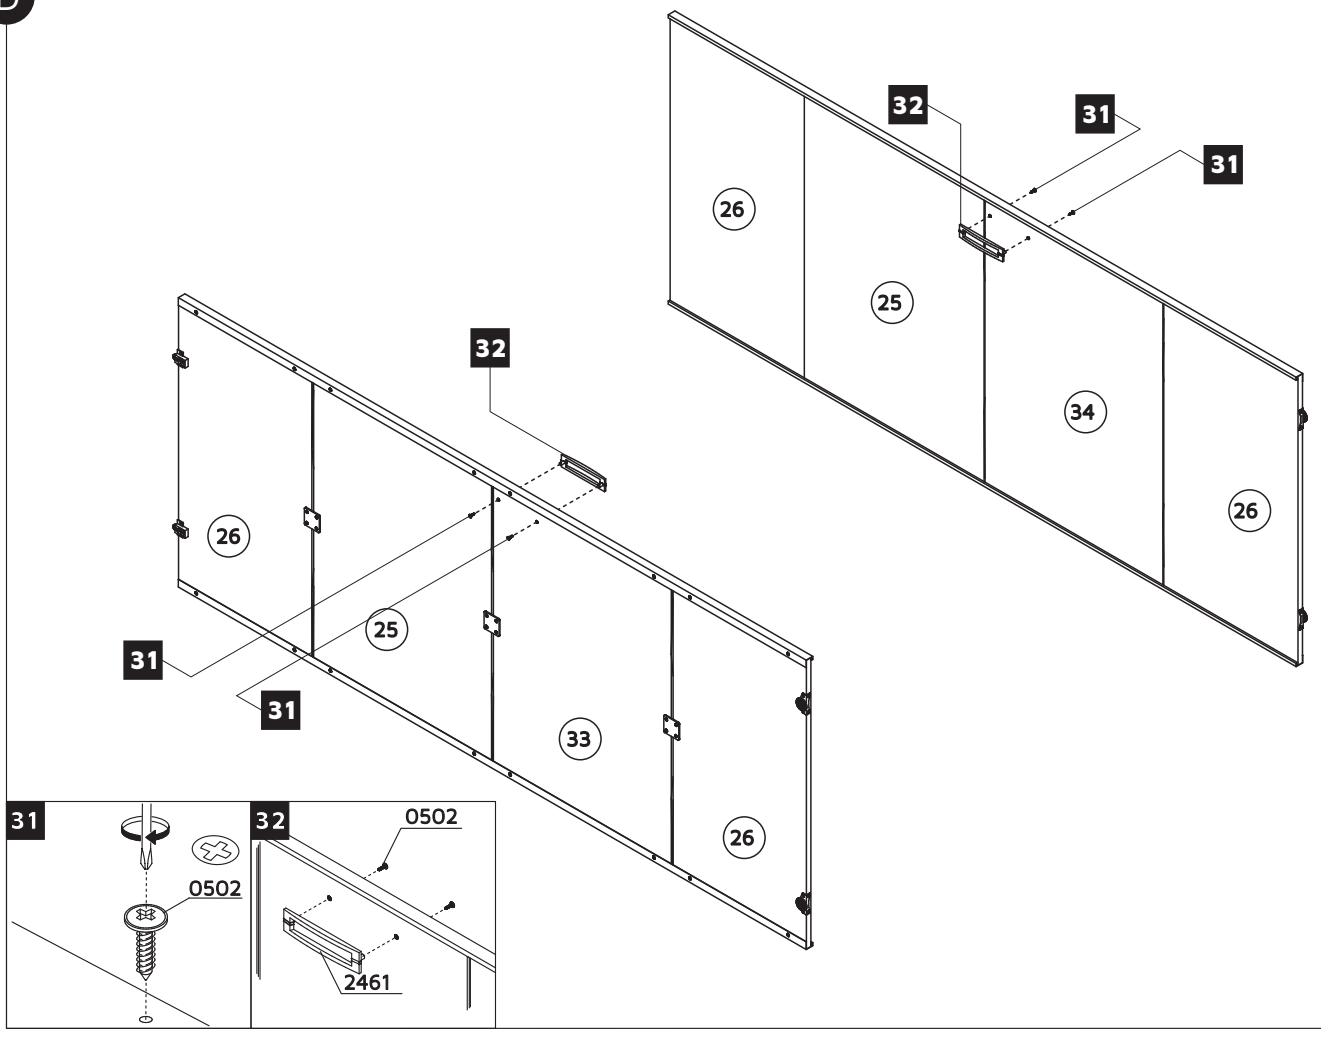
32
31
31
26
25
34
26
32
26
25
31
31
33
26

31
0502
32
0502
2461

E

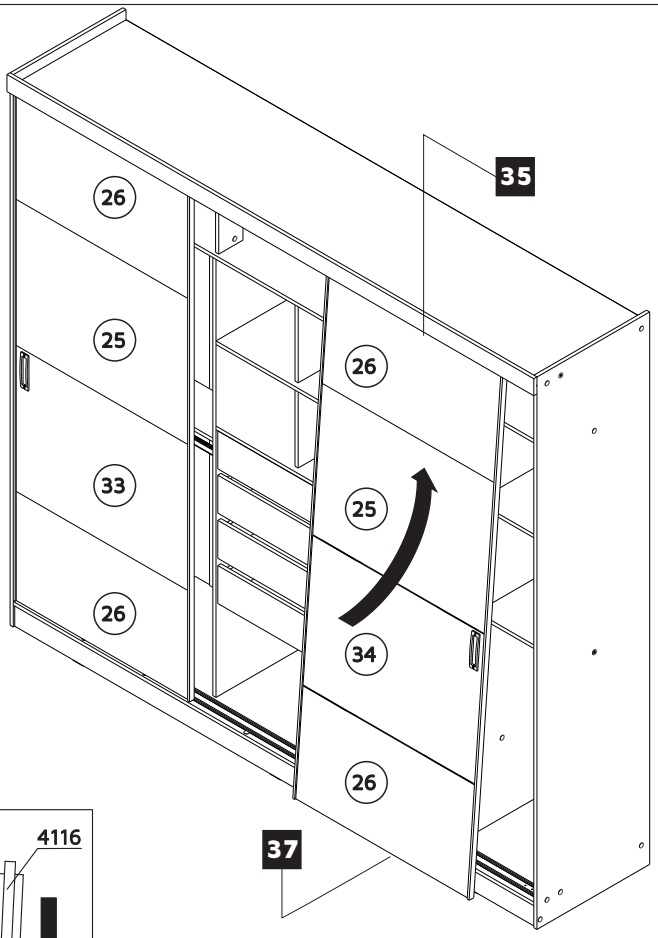
35
26
25
26
33
25
26
34
26
37

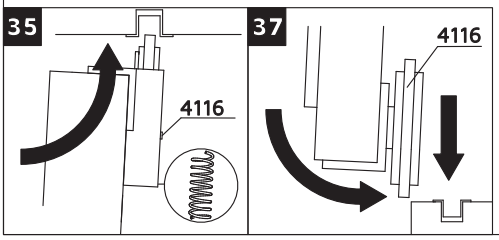
35
4116
37
4116

13

A

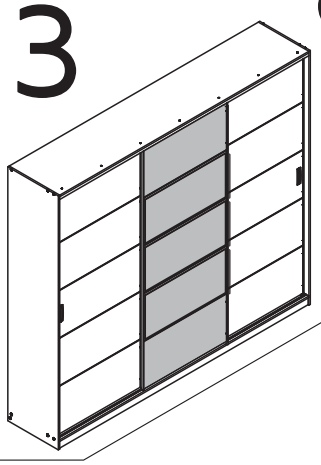

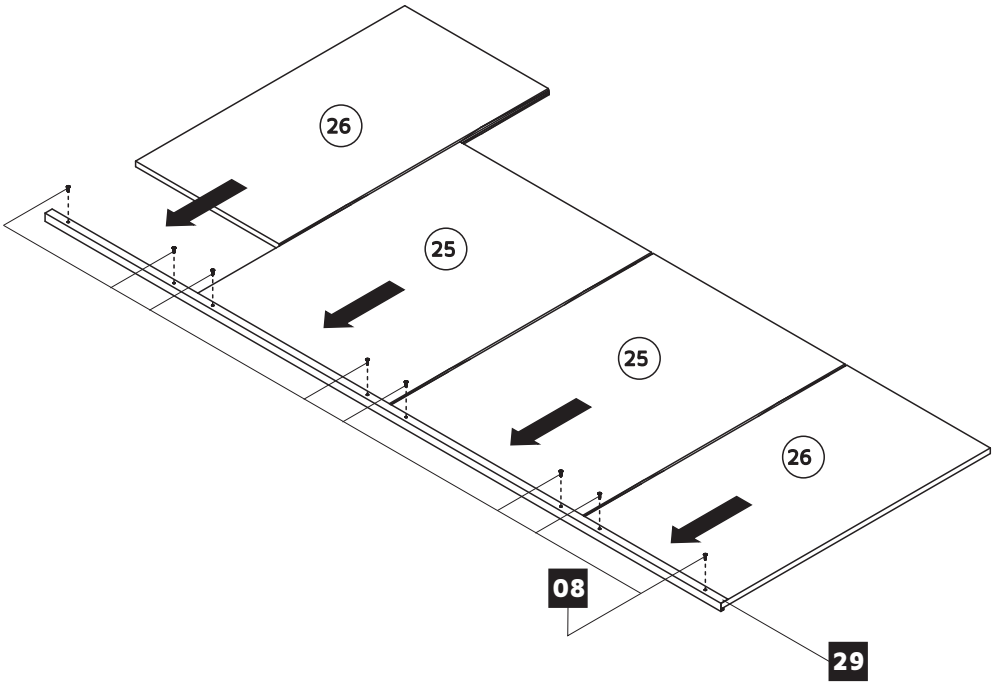
26
25
25
26
08
29

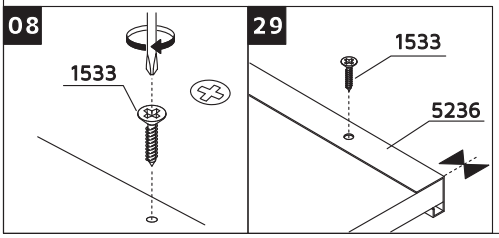
08
1533
29
1533
5236

B

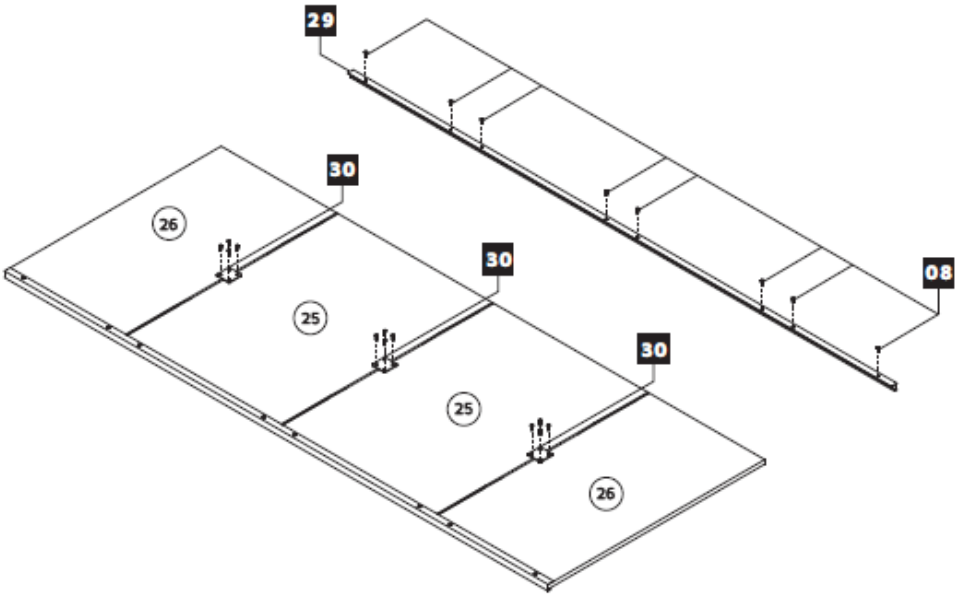

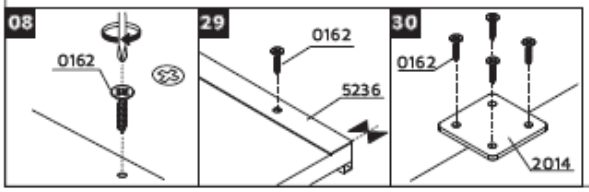

C

Note: Clean the contact surface with a clean and dry cloth.
Peel off the tape behind the mirror.

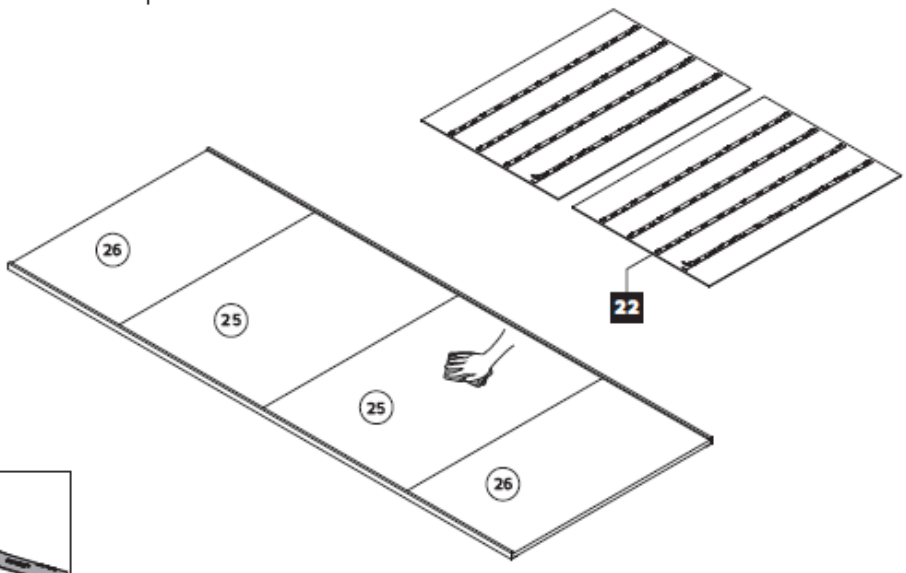

D

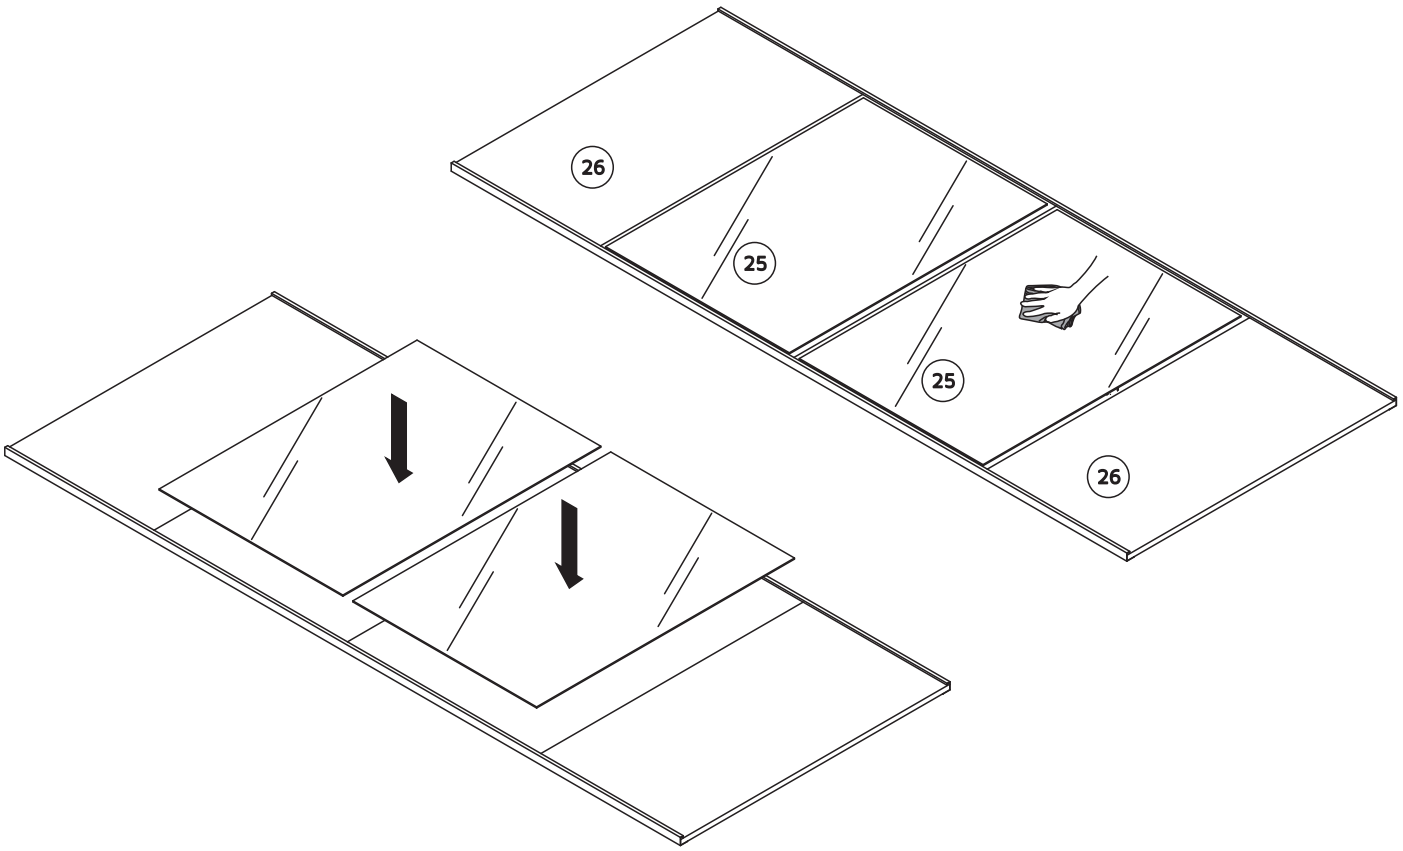

E

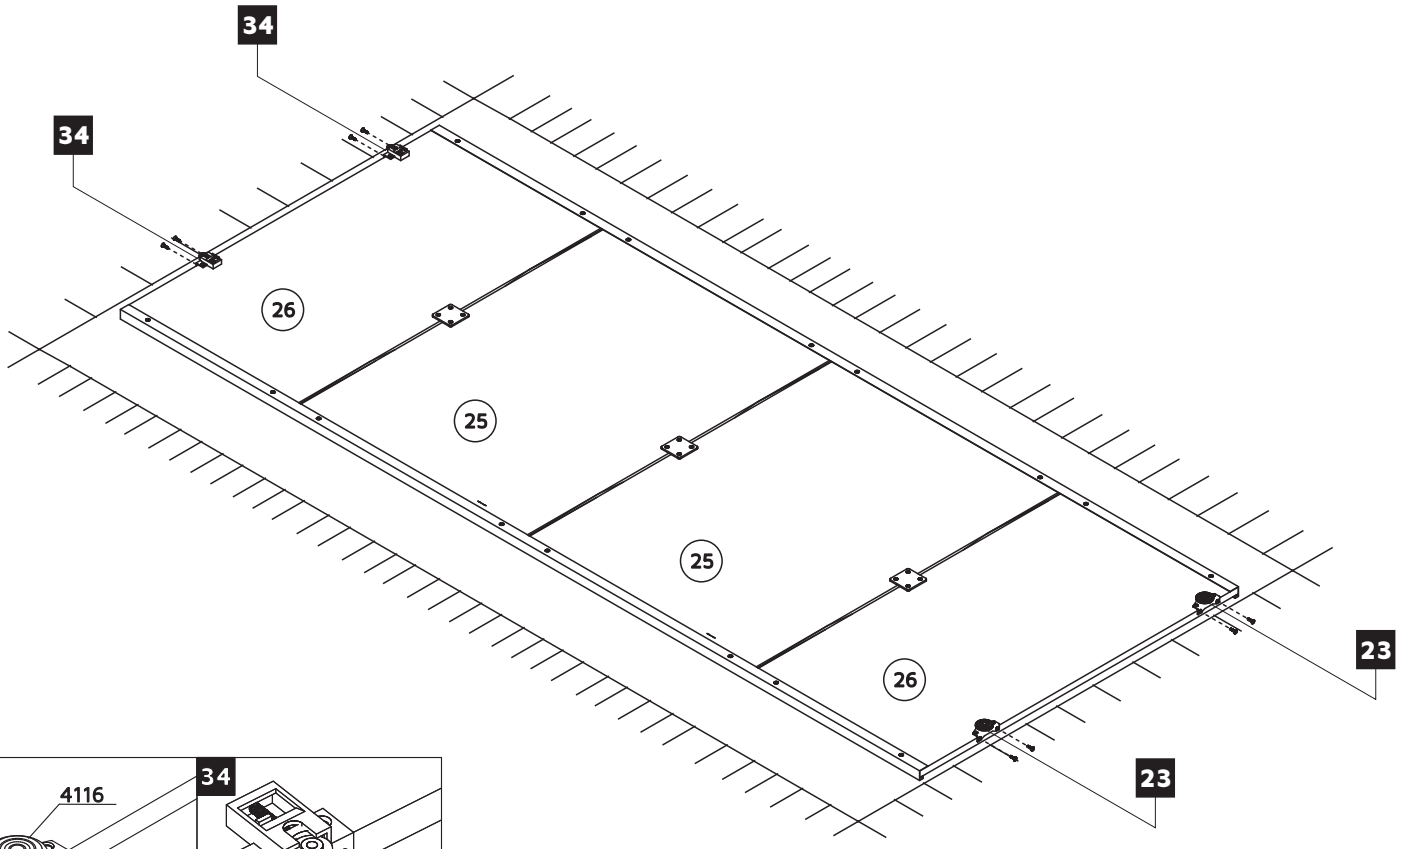

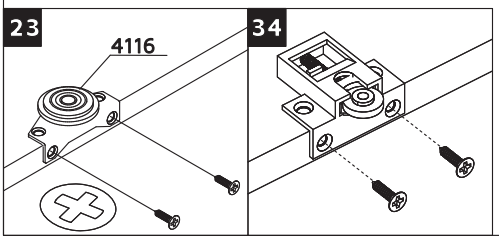

F